

Panasonic

Digital Cordless Answering System

Model No. **KX-TCD515NL**

Quick Guide


The guide is provided to allow a quick set-up of the basic features and operations of this phone. Please read the Operating Instructions for further details.

Before Initial Use

◆◆ Battery Installation


Please ensure the batteries are inserted as shown. ⊖ part should be inserted first. Close the cover as indicated by the arrow.

- When you replace the batteries, ⊕ part should be removed first.

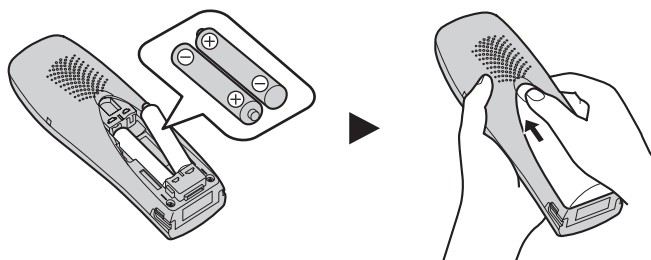

◆◆ Connection


Plug in the AC adaptor and the telephone line cord in order **1, 2, 3, 4**.

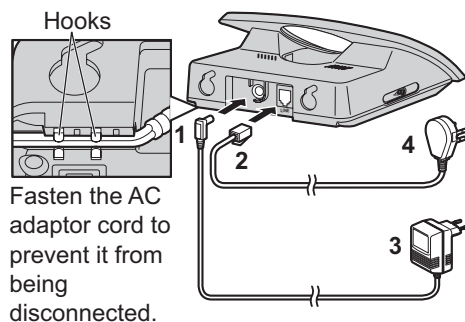


- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- Never install telephone wiring during a lightning storm.
- USE ONLY WITH Panasonic AC ADAPTOR PQLV19CE.

Location of Controls


◆◆ Handset

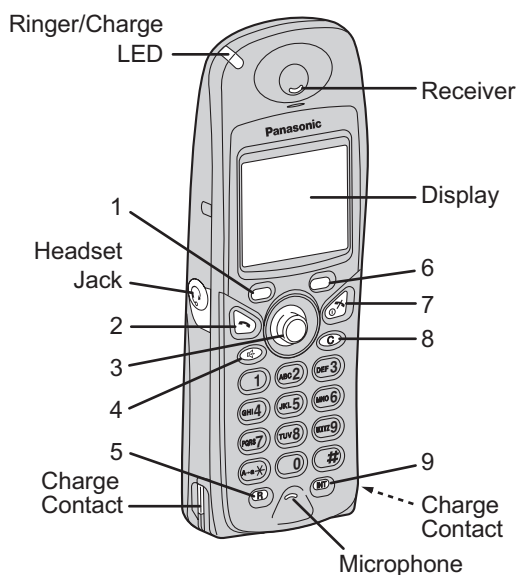



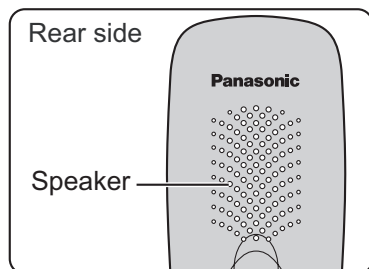



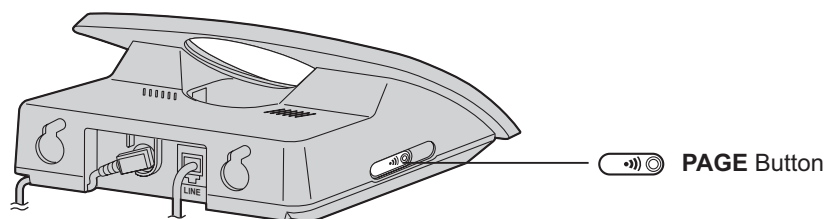







 
 






















- 1 - LEFT SOFT KEY
- 2 - TALK Button
- 3 - JOYSTICK
- 4 - SPEAKERPHONE Button
- 5 - RECALL Button
- 6 - RIGHT SOFT KEY
- 7 - POWER/TALK OFF Button
- 8 - CLEAR Button
- 9 - INTERCOM Button



◆◆ Base Unit













Operations

Function	Action
Power ON/OFF	Press and hold  .
Making a Call	Press  and dial the number.
Answering a Call	Press  .
Terminating a Call	Press  .
Key Lock ON/OFF	Press and hold  . To cancel, press and hold  .
Redialling the last number dialled	Press  ,  .
Dialling from the Redial List	Press  ,  to select a number, press  .
Storing caller information in the handset phonebook	Press  ,  , press  to select "H/set Phonebook", enter name, press  , enter phone number, press  , select the desired category, press  twice.
Dialling from the handset phonebook	Press  ,  to select a number, press  .
Dialling from the Caller ID List	Press  (or move ) ,  to select  , press  ,  to select a number, press  .
Adjust Receiver Volume	Move  during a call.
Speakerphone	Press  .
Muting Your Conversation	Press  during a call. To cancel, press  once more.
Answering System ON/OFF	Press  (or move ) ,  to select  , press  ,  to select "Answer On" or "Answer Off", press  .

Handset Settings Menu Chart



Press  (or move ,  to select .

1st Menu	2nd Menu	3rd Menu
 Setting Handset	Set Date/Time	
	Memo Alarm	
	Ringer Option 	Ringer Volume
		EXT Ringer Type
		INT Ringer Type
		Paging Tone
		Private Ring
	Tone Option 	Key Tone
	Display Option 	Standby Display
		Talk Display
		Select Language
		Private Colour
		Category Name
	Call Option 	Call Bar
		Direct Call No.
		Direct On/Off
	Registration 	Register H/set
		Cancel Base
 Other Option 	Select Base 	Auto
		Base 1
		⋮
		Base 4
		Change H/S PIN
		Change H/S Name
		Auto Talk
		LetterWise
		Battery Type
		Reset Handset

To select each menu,
press .

Base Unit Settings Menu Chart

Press  (or move ,  to select .













 










1st Menu	2nd Menu	3rd Menu
 Setting Base To select each menu, press  , then enter 4-digit base unit PIN. (Factory Preset 0000)	Ringer Option	Ringer Volume
	Call Option	Recall
		Pause Time
		Emergency Call
		Set ARS
		Call Restricted
	Cancel Handset	
	Other Option	Change Base PIN
		Reset Base

SMS Feature (Text Message)

You can send and receive text messages between other fixed and mobile phones that also support a compatible SMS feature and network.

The SMS feature is only available after subscribing to Caller ID.

See **SMS Feature** chapter in the **Operating Instructions** for further details.

Function	Action
Writing and Sending a New Message	<p>Press  (or move .</p> <p> to select “”, then press .</p> <p> to select “Create”, then press .</p> <p>Enter message (see notes in Operating Instructions).</p> <p>Press .</p> <p>Enter phone number, then press .</p> <p> to select “Yes” or “No”, then press .</p> <p>Press  to select “Send”.</p>
Receiving a Text Message	<p>When a new message has been received, “” is displayed and a tone sounds.</p>
Displaying/Reading the Incoming Message List	<p>Press  (or move .</p> <p> to select “”, then press .</p> <p> to select “Receive List”, then press .</p> <p> to select desired Incoming Message, then press .</p> <p> to scroll the message to read.</p>

Panasonic

Digital Cordless Answering System Operating Instructions

Model No. **KX-TCD515NL**

Preparation

Cordless Telephone

Answering System

Useful Information

Contents

Preparation

Before Initial Use.....	2
Important Information.....	5
Location of Controls	6
Meanings of Icons above SOFT KEYS	7
Meanings of Symbols and Operations of Keys	8
Display	9
Setting up	10

Cordless Telephone

Using the Telephone.....	14
Caller ID	19
List Menu	20
Using the Phonebook.....	23
SMS Feature (Text Message)....	31
Settings Menu Chart	42
Handset Settings.....	44
Base Unit Settings	56
Multi-Unit User Operations.....	63
Walkie-Talkie	70

Answering System

Answering System	73
------------------------	----

Useful Information

Using the Belt Clip	85
Optional Headset	85
Wall Mounting	85
Before Requesting Help.....	86
Character Table	90
Index	92
Technical Information.....	93
Guarantee	94



SMS

Caller ID and SMS Compatible

**Please read these Operating Instructions before using the unit
and save for future reference.**

Charge the batteries for about 7 hours before initial use.

Before Initial Use

◆◆ Features



Digital Answering System

Up to 30 minutes recording time or up to 64 messages, with time/day stamp that records when messages were received and counts the total number.



SMS (Short Message Service) compatibility

Now the convenience of sending and receiving text messages is available from a home telephone.



32-Polyphonic Ring Tones

A variety of high-quality sounds can be reproduced for your ring tones. You can choose from 9 preset melodies and 6 ring tones.



Hands-Free Speakerphone

You can talk without holding the handset. Convenient for talking while doing something else.



Headset Jack

Plug in the optional headset and the hands-free facility provides total ease and freedom of use.



Illuminated Keypad

Lights up when there is an incoming call or you touch any key for easier operation even in the dark.



200+20-Station Phonebook

Stores 200 station names and numbers with the built-in telephone directory of the handset to be recalled easily and stores 20 station names and numbers in the base unit for Audible Caller ID feature.



Multiple Handsets

Up to 6 handsets can be registered with a single base unit for added convenience. (Optional handset/charger is available separately.)



LCD Backlight

Lights up when there is an incoming call or you touch any key for easier operation even in the dark.

Before Initial Use

Thank you for purchasing your new Panasonic digital cordless telephone.

Dear purchaser,

You have acquired a KX-TCD515NL, which is a product made in accordance with the Digital Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- operates up to 6 handsets at one base unit.
- allows an intercom between 2 handsets.
- allows the operation of a handset at up to 4 base units, expanding the communication radio area.


Caller ID and SMS Services, where available, are telephone company services. After subscribing to Caller ID, this phone will display the caller's phone number.

Preparation

Before Initial Use


Accessories (specific to product type)

☐ AC Adaptor
PQLV19CE

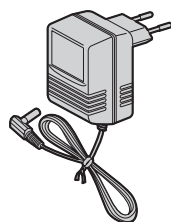

one

☐ Telephone Line Cord

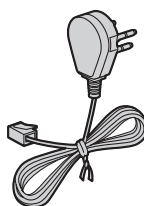

one

☐ Rechargeable Batteries
(AAA size)
HHR-4EPT/BA2 (P03P)




two

☐ Belt Clip



one

☐ Battery Cover

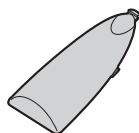

one

Additional accessories are available for purchase. Contact your Panasonic Service Centre for further details. 070 - 3314500

Important Information

Preparation

Only use the power supply included with the product.

Do not connect the AC adaptor to any AC outlet other than the standard AC220 - 240 V.

The apparatus is approved for use with PQLV19CE power supply.

This apparatus is unable to make calls under the following conditions:

- The portable handset batteries need recharging, or have failed.
- During a mains power failure.
- When the Key Lock is set to ON.
- When the unit is in Direct Call mode (only the Direct Call Number can be made).

Do not open the base unit or handset (other than to change the batteries).

This apparatus should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Care should be taken that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

Environment

Do not use this unit near water.

This unit should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is located/installed near the unit and is accessible.

WARNING:

TO PREVENT THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY OTHER TYPE OF MOISTURE.

Battery Caution

1. Use only the specified batteries.
2. **Only use rechargeable batteries.**
3. Do not mix old and new batteries.
4. Do not dispose of batteries in a fire, as they may explode.
Check local waste management codes for special disposal instructions.
5. Do not open or mutilate the batteries.
Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin.
The electrolyte may be toxic if swallowed.
6. Exercise care in handling the batteries in order not to short circuit the batteries with conductive materials such as rings, bracelets and keys.
The batteries and/or conductor may overheat and cause burns.
7. Charge the batteries in accordance with the information provided in this operating guide.
8. Batteries are supplied with this product. When they are empty, you should not throw them away. Instead, hand them in as small chemical waste.




Location


- For maximum distance and noise-free operation, place your base unit:
 - Away from electrical appliances such as TVs, radios, personal computers or other phones.
 - In a convenient, high, and central location.

Location of Controls

◆◆ Handset

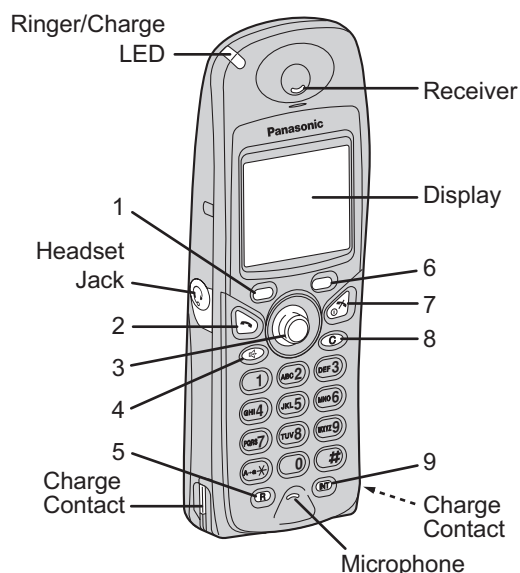


- 1 - **LEFT SOFT KEY**
- 2 - **TALK Button**
- 3 - **JOYSTICK**
- 4 - **SPEAKERPHONE Button**
- 5 - **RECALL Button**
- 6 - **RIGHT SOFT KEY**
- 7 - **POWER/TALK OFF Button**
- 8 - **CLEAR Button**
- 9 - **INTERCOM Button**

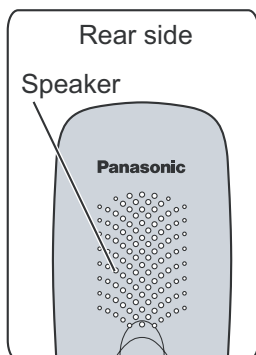

How to Use the Handset Soft Keys

3 soft keys are used to select functions displayed directly above the keys. Functions displayed above the keys will change depending on the state of use. For example, on the standby mode display, "", "", and "", are displayed above the soft keys.

Example: Standby Mode Display

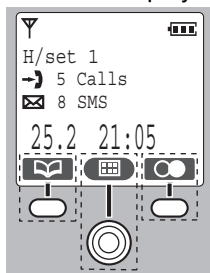

To operate "", (**Phonebook**), press **LEFT SOFT KEY**.

To operate "", (**Menu**), press **JOYSTICK** directly as the middle soft key.


To operate "", (**Redial**), press **RIGHT SOFT KEY**.

When "", is displayed above a soft key, the soft key will not work.

- To select only "", (**Menu**), you can also select it moving the **JOYSTICK** up, down, left or right.

Location of Controls

◆◆ Base Unit

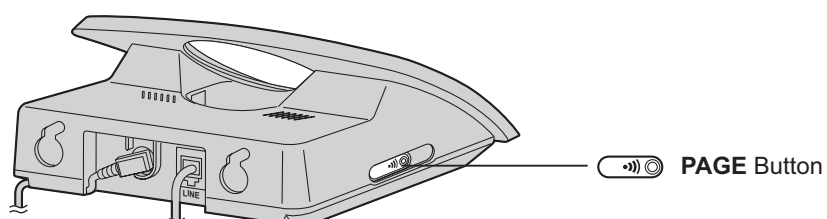










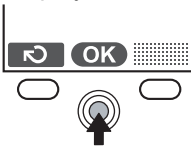


Preparation

Meanings of Icons above SOFT KEYS


Icon	Function	Icon	Function
	Go Back		LetterWise®
	Menu		Alphabet
	Sub-Menu		Numeric
	OK		Extended 1
	Redial		Extended 2
	Phonebook		Greek
	New Phonebook		Russian
	Search		Select
	Key Lock		Pause
	12/24 Hour Clock		Mute
	Stop		Delete
	No Function		

Meanings of Symbols and Operations of Keys

Symbol	Meaning	
	Move the JOYSTICK up, down, left or right. e.g., Search the main menu.	
e.g., OK 	e.g., Display of menu items 	Press JOYSTICK directly in the centre. In this example, the desired item is selected. 
e.g., Redial 	e.g., Standby Mode Display 	Press RIGHT SOFT KEY . In this example, the telephone number last dialled is displayed.
e.g., Go Back 	e.g., Display of menu items 	Press LEFT SOFT KEY . In this example, the display returns to the previous menu.  has the same function.
	Press POWER/TALK OFF Button. <u>Press this button for one or two times, then the display returns to the standby mode any time.</u>	
	To go to the next step.	
“ ”	The words in “ ” indicate the words in the display.	
	Ringing Phone	

Display

◆◆ Display Icons

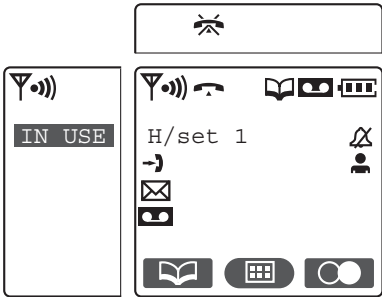

The diagram shows a display screen with the following elements:



- Top status bar: Antenna icon, signal strength bars, and a battery icon.
- Left side: A vertical bar with "IN USE" text and a handset icon.
- Center: "H/set 1" text, a handset icon, a book icon, and a message icon.
- Bottom: A row of icons including a book, a keypad, and a power button.

Legend for icons:


- Antenna icon: Within range of a base unit
- Antenna with signal bars: Out of range/No registration/No power on base unit
- Signal waves icon: Paging/Intercom/While connecting with a base unit
- Handset icon: Making or answering calls
- Handset with antenna: Call Bar ON
- Book icon: Phonebook Mode
- Handset with book: Answering System ON
- Message icon: Message indication
- Battery icon: Battery strength
- Person icon: Direct Call ON
- Bell icon: Ringer Volume OFF
- "H/set 1" text: Handset Name (e.g., Handset 1)
- Handset with arrow: New call (Caller ID only)
- Envelope icon: SMS mail (text messages)
- "IN USE" text: The line is being used by another handset (for additional handset users).

Preparation

◆◆ Main Menu Display

To go to the **Main Menu**, press **JOYSTICK**  directly in the centre (or move ) while in the standby mode display. The selected menu icon is turned over, and its title is displayed.

Example: "Caller ID" is selected.

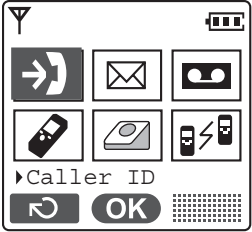

The diagram shows the Main Menu display with the following elements:

- Top status bar: Antenna icon, signal strength bars, and a battery icon.
- Grid of icons: A 3x3 grid of icons representing different menu options. The "Caller ID" icon (a handset with an arrow) is highlighted with a thick border.
- Bottom: "Caller ID" text, a "Return" icon, an "OK" button, and a keypad.


Legend for icons:

- Handset with arrow: Caller ID
- Envelope icon: SMS
- Handset with book: TAM Operation
- Handset with book: Setting Handset
- Handset with book: Setting Base Unit
- Handset with book: Walkie-Talkie

Setting up

◆◆ Connection

Plug in the AC adaptor and the telephone line cord in order **1, 2, 3, 4**.

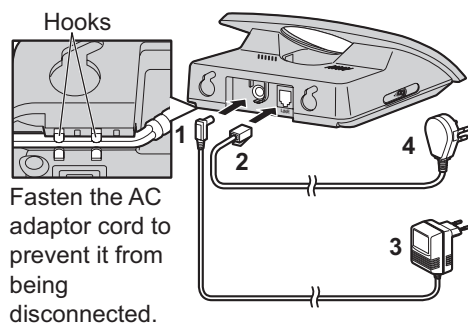


- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- Never install telephone wiring during a lightning storm.
- USE ONLY WITH Panasonic AC ADAPTOR PQLV19CE.

◆◆ Battery Installation


Please ensure the batteries are inserted as shown. ⊖ part should be inserted first. Close the cover as indicated by the arrow.

- When you replace the batteries, ⊕ part should be removed first.

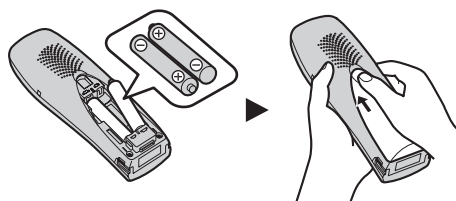

◆◆ Battery Charge


At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. **Please charge the batteries for about 7 hours before initial use.**

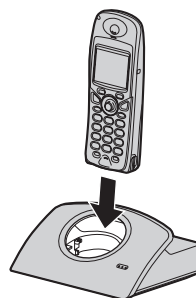

During charging, the charge LED will light as shown below.

During charging

Fully charged

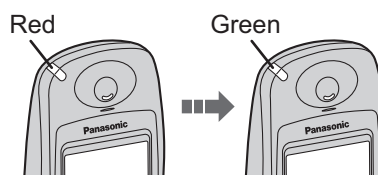

Display icon	Battery strength
	High
	Medium
	Low
	Needs to be charged

The handset which power is off will be turned on automatically when it is placed on the base unit.

The handset will not operate while it is on the base unit.

If you do not recharge the handset battery for more than 15 minutes, the display will flash when the handset is lifted off the base unit.

Setting up

◆◆ Battery Information

After your Panasonic battery is fully charged:

Ni-MH Batteries (typical 700 mAh)

Operation	Operating Time
While in use (TALK)	10 hrs approx.
While not in use (Standby)	120 hrs approx.


Ni-Cd Batteries (typical 250 mAh)

Operation	Operating Time
While in use (TALK)	4 hrs approx.
While not in use (Standby)	40 hrs approx.

- Times indicated are for peak performance.
- The battery operating time may be shortened depending on usage conditions and ambient temperature.
- **Clean the charge contacts of the handset and the base unit with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- The batteries cannot be overcharged unless they are repeatedly removed and replaced.
- For maximum battery life, it is recommended that the handset not be recharged until the battery icon flashes



◆◆ Replacing the Batteries

If the  icon flashes after a few telephone calls even when the handset batteries have been fully charged, both batteries must be replaced.

- **Charge new batteries for approximately 7 hours before initial use. (The telephone line cord must not be connected to the telephone socket at this time.)**
- **When replacing the batteries, be sure to set up the battery type even if you install the same type of batteries to initialise battery remaining memory of your handset. (See Setting the Battery Type on page 53.)**
- Do not use non-rechargeable batteries. If non-rechargeable batteries are fitted and start charging, it may cause the leakage of the battery electrolyte.
- Press the notch on the cover firmly and slide it as indicated by the arrow. Replace both batteries (p. 10) and close the cover then charge the handset for about 7 hours.



Please order Panasonic P03P (Ni-MH) or P03H (Ni-Cd) batteries.

Setting up

◆◆ Power ON/OFF

◆ Power ON

Press and hold **POWER**.



When **POWER** is released, the display changes to the standby mode.

◆ Power OFF


Press and hold **POWER**.



The display goes blank.

◆◆ Selecting the Display Language

You can select one of 19 languages. The factory preset is Dutch.

To exit the operation, press  at any time.

1 Press **JOYSTICK** (or move).



2 Select "Setting Handset".



3 Select "Display Option".



4 Select "Select Language".



5 Select the desired language.




- If you set a language you cannot read, reset the handset to its initial settings.


Press  → Press  → Move  → Press  → Move  → Press  → Move  → Press  → Enter 4-digit Handset PIN (Factory Preset 0000) → Move  → Press 







All handset settings will be reset to their initial settings (p. 55), however, the phonebook data will be saved.

Setting up













◆◆ Setting the Date and Time

After a mains power failure, the clock needs to be adjusted. Ensure that the  icon is not flashing.

To exit the operation, press  at any time.




1 Press JOYSTICK (or move). 	2 Select "Setting Handset".  → 	3 Select "Set Date/Time".  → 
4 Enter the date (see below).	5 Enter the time (see below).	6 Press JOYSTICK . 

Example: To set 16 February, 2003, 7:15 pm.

Date			Time		
Day	Month	Year	Hour	Minute	12/24 hour clock
 	→  	→  	→  	→  	→  

◆ To Select 12/24 Hour Clock

Press **RIGHT SOFT KEY** repeatedly.

	→	24 hour clock	→	12 hour clock (AM)	→	12 hour clock (PM)
						

Using the Telephone

◆◆ Making a Call

◆ Pre-Dialling

- 1 Enter Phone Number.
- 2 Press **TALK.**



◆ Post-Dialling



- 1 Press **TALK.**
- 2 Enter Phone Number.



- When using **Pre-Dialling**:
If you need to make a correction while entering the phone number, press **C**. The digit is cleared to the left, then you can enter numbers. All digits are cleared if you press and hold **C**.
- You can also press **☎** to make a call.

◆◆ Answering a Call

◆ Terminating a Call

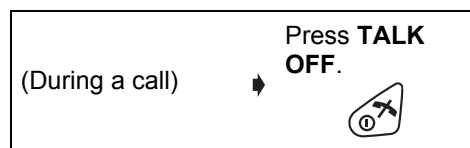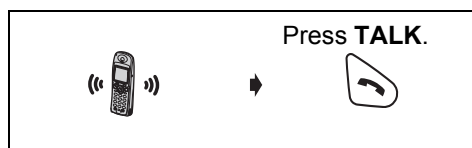

- You can also answer a call by pressing **0** to **WXYZ9**, **↶→**, **#**, **☎** or **INT** (**Any Key Talk**).

◆◆ Auto Talk

If you set **Auto Talk** to ON, you can answer a call by lifting the handset off the base unit. (See **Setting Auto Talk ON/OFF** on page 53.)

Using the Telephone

◆◆ Receiver (or Headset Receiver)/Speaker Volume

The choices for the receiver (or headset receiver) volume are 3 levels, and 6 levels for the speakerphone volume.

(During a call) ➔ To increase volume, move the **JOYSTICK** up.
To decrease volume, move the **JOYSTICK** down.



◆◆ Have a Hands-Free Phone Conversation (using Digital Speakerphone)

Speakerphone allows you to talk to your caller without holding the handset and allows other persons in the room to listen to the conversation.

◆ To Return to Receiver

(During a call) ➔ Press **SPEAKERPHONE**.



Press **TALK**.



- For best performance, please note the following:
 - Talk alternately with the caller in a quiet environment.
 - If either party has difficulty hearing, move the **JOYSTICK** up or down to change the volume accordingly. The choices for the speakerphone volume are 6 levels.

◆◆ Muting Your Conversation

During a call, you can mute your phone so the other party cannot listen to you. When muting your conversation, you can hear the other party.

◆ To Mute

(During a call) ➔ Press **LEFT SOFT KEY**, then Icon flashes.





◆ To Return to the Conversation

Press once more.
Icon stops flashing.



Using the Telephone


◆◆ Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted while the key lock is ON. When the key lock is ON, the menu icon  changes to .

When the key lock is ON, emergency calls cannot be made until key lock is cancelled.


◆ Key Lock ON

(Standby Mode Display) → Press and hold **JOYSTICK** directly for more than 2 seconds.



◆ Key Lock OFF

 

Press and hold **JOYSTICK** directly for more than 2 seconds once more.





◆◆ Handset Locator/Paging







 
You can locate a misplaced handset by paging it.

◆ Paging

<Base Unit> Press PAGE . 	→	<All Handsets> All registered handsets ring for 1 minute. 
--	---	--

◆ To Stop Paging

<Base Unit> Press PAGE . 	OR	<One of Handsets> Press TALK . 
--	----	--

- You can also stop paging by pressing  to , , , ,  or .
- When the ringer volume is off (p. 47), the handset will ring at the lowest level.

Using the Telephone



◆◆ Redialling

The last 10 numbers dialled are automatically stored in the redial list.

◆ Dialling with the Redial List

- 1** Press **RIGHT SOFT KEY**.
- 2** Search for the desired dialled item.
- 3** Press **TALK**.







- If there are no items stored in the redial list when pressing , the display shows "Memory Empty".
- If the items are scrolled at the end when you search for the desired dialled item, an end tone sounds.
- You can also press  to make a call.
- To save the numbers from the redial list into the handset phonebook, or to edit or delete from memory, see pages 21 and 22.

◆ Dialling the Last Number Dialed

- 1** Press **TALK**.
- 2** Press **RIGHT SOFT KEY**.



Auto Redial

If you press  then  to redial and the dialled number is engaged, the unit will automatically call back every 40 seconds, up to 12 times. When using Auto Redial, press  again after pressing  if the mute has not been cancelled.

◆◆ Recall Feature




RECALL (R) is used to access special telephone services. Contact your Network provider for details. If your unit is connected to a PBX, pressing **(R)** allows you to access some features of your host PBX such as transferring an extension call.

Using the Telephone

◆◆ Dialling Pause (for PBX line/long distance service users)

A dialling pause is used when a pause in the dialling of a phone number is necessary using a PBX or accessing a long distance service.


For example, when 0 (line access number) is dialled followed by a pause to access an outside line through a PBX:

1 Press 0 .	2 Press RIGHT SOFT KEY .	3 Enter Phone Number.	4 Press TALK .
			


- Entering a pause prevents misdialling when you redial or dial a stored number.
- Pressing **RIGHT SOFT KEY (Pause)** more than once increases the length of the pause between numbers.
- To change the pause time, see **Selecting the Pause Time** on page 57.

◆◆ Call Waiting

Call Waiting is a service of your Network provider and will only operate if you have subscribed to this service. You can answer the second call, keeping the first call on hold.

(Call waiting tone sounds during a call)	➔	Press RECALL .	➔	The first call is put on hold and you can answer the second call.
				

◆◆ To Return to the First Caller

Press RECALL once more.


- If you subscribed to Caller ID and Call Waiting services, your handset displays a second caller's phone number while talking.
- If the phone number is stored in the phonebook with its name, the caller's name will also be displayed.
- Please consult your Network provider for details of this service.

Caller ID

◆◆ Caller ID Service

Caller ID is a service of your Network provider and will only operate if you have subscribed to this service.

After subscribing to Caller ID, this phone will display the caller information.

If your unit is connected to a PBX or a telephone line that does not support this service, you will not be able to use it.

◆ Standby Mode Display


H/set 1
→ 10 Calls
17.8 14:59

When new calls have been received, the display shows the number of calls.


In the example on the left, 10 new calls have been received.


◆◆ Making a Call from the Caller ID List


The last 50 callers' phone numbers are stored in the order the calls were received. When the 51st call is received, the oldest caller information is cleared. If the caller's name has been stored with the number in the phonebook (see **Storing Caller Information** on page 24), the caller's name will also be displayed.

To exit the operation, press  at any time.

1 Press **JOYSTICK** (or move).



2 Select " Caller ID".






3 The newest caller information is displayed.

Time Received


Date Received 17.8 14:59

Name JOHN SMITH


Tel No. 0123456789


  

4 Search for the desired item.



5 Press **TALK**.










- You can also press  to make a call.
- "✓" indicates you have already viewed this caller information, or answered the call.
- If the caller has requested not to display his/her information, the display shows "Private Caller".
- If the caller dialed from an area which does not provide Caller ID service, the display shows "Out of Area".
- If the items are scrolled at the end when you search for the desired item, an end tone sounds.

List Menu

◆◆ Caller ID List Menu

You can save the numbers from the Caller ID list into the handset phonebook, and you can edit (for calling) or delete item(s) in the Caller ID List.





To exit the operation, press  at any time.


1 Press JOYSTICK (or move). 	2 Select "  Caller ID".  → 	3 Select the desired item.  → 
Go to step 4.		

- If the items are scrolled at the end when you search for the desired item, an end tone sounds.
- If there are no items stored in the caller list when "Caller ID" is selected, the display shows "Memory Empty".

◆ Editing the Received Number for Calling








Follow steps 1 to 3 shown above, then:

4 Select "Edit for Call".  → 	5 Edit Phone Number. (max. 24 digits)	6 Press TALK or press JOYSTICK to call.  OR 
---	---	--

- You can also press  to make a call.

◆ Storing the Number in the Handset Phonebook

Follow steps 1 to 3 shown above, then:

4 Select "Save Phonebook".  → 	5 Enter Name (p. 26), then press  . (max. 16 characters) If required, edit phone number. (max. 24 digits)	6 Press JOYSTICK . 
7 Select the desired category or "Off" (p. 23).  → 	8 Select "Save", then "Saved" is displayed. 	

List Menu

◆ Deleting One/All Caller ID Item(s)

Follow steps **1** to **3** on the previous page, then:

4 Select "Delete" or "Delete All".



5 Select "Yes", then "Deleted" is displayed.



◆◆ Redial List Menu

You can save the numbers from the redial list into the handset phonebook, and you can edit (for calling) or delete item(s) in the redial list.

To exit the operation, press at any time.

1 Press **RIGHT SOFT KEY**.



2 Select the desired item.



Go to step **3**.

- If there are no items stored in the redial list when pressing , the display shows "Memory Empty".

◆ Storing the Number in the Handset Phonebook

Follow steps **1** and **2** shown above, then:

3 Select "Save Phonebook".



4 Enter Name (p. 26).
(max. 16 characters)

5 Press **JOYSTICK** twice.



6 Select the desired category or "Off" (p. 23).



7 Select "Save", then "Saved" is displayed.



List Menu

◆ Editing the Dialed Number for Calling

 
Follow steps **1** and **2** on the previous page, then:

3 Select "Edit for Call".



4 Edit Phone Number.
(max. 24 digits)

5 Press **TALK** or press **JOYSTICK** to call.



- You can also press  to make a call.

◆ Deleting One/All Redial Item(s)

Follow steps **1** and **2** on the previous page, then:

3 Select "Delete" or "Delete All".



4 Select "Yes", then "Deleted" is displayed.



Using the Phonebook

You can store up to 200 caller information in the handset phonebook and up to 20 caller information in the base unit phonebook. If you subscribed to Caller ID and you received a call from the same phone number you stored with name in the phonebook, the display will show the caller's name.

◆◆ Private Category Feature

You can categorise caller information in the handset phonebook. There are 9 categories available. For example, category 1 can be used to save friends' numbers. For each category, you can change the category name (max. 10 characters: see **Changing the Private Category Name** on page 49), you can select one of 3 Ringer LED colours (see **Setting the Private Colour** on page 49), and one of 15 ringer types (see **Selecting the Ringer Pattern for Private Ring** on page 47).

This feature is only available after subscribing to Caller ID Service. Please contact your network provider for further information.

Example

Private Category No.	Ringer LED Colour *			Private Ringer Type	Category Name
	Green	Orange	Red		
1		✓		3	Friends
3			✓	2	Customers

* The factory preset LED colour is green.

- The unit will indicate an incoming call using the factory preset LED colour (green) and the ringer pattern assigned to external calls (p. 47) momentarily until Caller ID information is received from the Network provider.

◆◆ Audible Caller ID Feature


To use this feature, you need to subscribe to Caller ID service. For further information, please contact your Network provider. You need to store caller information and record the name into the base unit phonebook.

When a call comes in, the unit will ring and the caller information will be received. If you receive a call from one of the same phone numbers stored in the base unit phonebook, the handset will announce the recorded name.

- If the ringer volume of the handset is OFF, the recorded name will not be announced. Announcement volume depends on the handset ringer setting (p. 47).
- Your unit may mute one or more of rings in order to announce the name of the caller, as announcement is prior to rings.

Using the Phonebook

◆◆ Storing Caller Information

To exit the operation, press  at any time.

◆ Handset Phonebook

1 Press **LEFT SOFT KEY**.



2 Press **JOYSTICK**.



3 Select "H/set Phonebook", then the display shows the number of empty phonebook entries.



4 Enter Name (p. 26).
(max. 16 characters)

5 Press **JOYSTICK**.



6 Enter Phone Number.
(max. 24 digits)

7 Press **JOYSTICK**.



8 Select the desired category or "Off".



9 Select "Save", then "Saved" is displayed.












- If "Memory Full" is displayed at step 3, the phonebook is full. To store, delete other stored items in the phonebook.
- To continue storing other caller information, repeat from step 4.

Using the Phonebook

◆ Base Unit Phonebook

To use an Audible Caller ID feature (p. 23), you must store caller information into the base unit phonebook.

Follow steps 1 and 2 on the previous page, then:

3 Select "Base Phonebook", then the display shows the number of empty phonebook entries. 	4 Enter Name (p. 26). (max. 16 characters) 	5 Press JOYSTICK . 
6 Enter Phone Number. (max. 24 digits) 	7 Press JOYSTICK . 	8 Select "Start Recording". 
9 Record the name within 1 minute. 	10 Press JOYSTICK . 	11 Select "Save", then "Saved" is displayed. 

Cordless Telephone

- If "Memory Full" is displayed at step 3, the phonebook is full. To store, delete other stored items in the phonebook.
- If "Memory Full" is displayed at step 8, the remaining recording time is 0. To store, delete unnecessary incoming/memo messages (p. 78).
- To continue storing other caller information, repeat from step 4.

◆ Copying an Item from Handset Phonebook to Base Unit Phonebook








Press **INTERCOM** (INT) → Press  → Press  to select "Copy to Base" →

Move  to select the desired item → Press  ("Copy Complete" is displayed.)

To use the Audible Caller ID feature, record the name (see **Base Unit Phonebook** on page 29).

Using the Phonebook

◆◆ Entering Names/Characters

Keys	Operations
	Move the JOYSTICK up, down, left or right to move the cursor (a flashing digit).
 to 	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added at the beginning.)
	Press to delete characters. (Character on the cursor is deleted. To delete all characters, press and hold.)
	Press to change between upper and lower case.
	Press to insert a blank space (except when in Numeric input mode).
	Press to insert a symbol (*, #, /, etc.) (except when in Numeric input mode).


◆ Selecting the Input Mode

You can select one of 7 input modes by pressing **RIGHT SOFT KEY** while entering a name. The function icon above the key displays the current input mode. The factory preset is “**LetterWise®**”. **LetterWise®** is a simplified text entry system. This system suggests to the user the most likely letter to follow the text entered previously. To enter names in this mode, see page 34.

For the full character map, see **Phonebook Character Table** (p. 90).

To switch the input mode while editing the name in the phonebook, press **RIGHT SOFT KEY**.

LetterWise® Alphabet Numeric Greek Extended 1 Extended 2 Russian

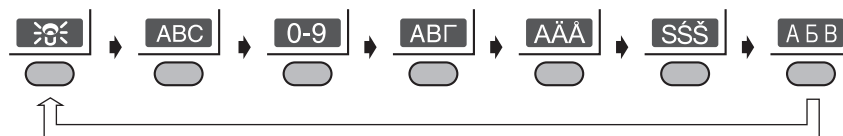

- If **LetterWise®** is selected, select a language you require (p. 53).

Example (Alphabet Mode)


Enter the name using the letters on the keypad. For example, to enter “Anne” in Alphabet Mode:



Using the Phonebook

◆◆ Finding Items in the Phonebook

All phonebook items are stored in the following order: Alphabet letter/Symbol/Number/Telephone Number (when a name is not stored).

To exit the operation, press  at any time.

- 1** Press **LEFT SOFT KEY**.
To select the base unit phonebook,
press **LEFT SOFT KEY** again.



- 2** Move the **JOYSTICK** up or down to
search for the desired item.



◆ Searching for a Name by Initial

Example: To find "Felix"

- 1** Press **LEFT SOFT KEY**.
To select the base unit
phonebook, press **LEFT
SOFT KEY** again.



- 2** Press **3** repeatedly
until the first item
under "F" is displayed.



- 3** Move the **JOYSTICK**
down until "Felix" is
displayed.



Cordless Telephone

◆ Searching by Private Category (For Handset Phonebook only)

- 1** Press **LEFT SOFT
KEY**.



- 2** Press **RIGHT SOFT
KEY**.



- 3** Select "Category".



- 4** Select the desired
category.






 


- 5** Select the desired
item to display.






Using the Phonebook

◆ Searching by Index Search Mode


Example: To find "ΣΟΦΙΑ" (SOPHIA).

- | | | |
|--|---|---|
| <p>1 Press LEFT SOFT KEY.
To select the base unit phonebook, press LEFT SOFT KEY again.</p>  | <p>2 Press RIGHT SOFT KEY.
When searching from the base unit phonebook, go to step 4.</p>  | <p>3 Select "Index Search".</p>  |
| <p>4 Press RIGHT SOFT KEY repeatedly until the desired input mode (Greek) appears.</p>  | <p>5 Select the desired initial character "Σ".</p>  | <p>6 Move the JOYSTICK down until "ΣΟΦΙΑ" is displayed.</p>  |




◆◆ Dialling from the Phonebook

- | | | |
|--|--|--|
| <p>1 Press LEFT SOFT KEY.
To select the base unit phonebook, press LEFT SOFT KEY again.</p>  | <p>2 Select the desired item (see above and previous page).</p> | <p>3 Press TALK or SPEAKERPHONE.</p>  OR  |
|--|--|--|

◆◆ Editing Caller Information

To exit the operation, press  at any time.












◆ Handset Phonebook

- | | | |
|---|--|--|
| <p>1 Press LEFT SOFT KEY.</p>  | <p>2 Select the desired item.</p>  | <p>3 Select "Edit".</p>  |
| <p>4 Follow steps 4 to 9 on page 24.</p> | | |


- To continue editing other caller information, repeat from step 2.

Using the Phonebook


◆ Base Unit Phonebook








<p>1 Press LEFT SOFT KEY twice.</p>  twice	<p>2 Select the desired item.</p>  → 	<p>3 Select "Edit".</p>  → 
<p>4 Edit Name. (max. 16 characters)</p>	<p>5 Press JOYSTICK.</p> 	<p>6 Edit Phone Number. (max. 24 digits)</p>
<p>7 Press JOYSTICK.</p> 	<p>8 Select "Start Recording". If you do not change the recorded name, select "Skip Recording", then go to step 11. If you delete the recorded name, select "Delete", then go to step 11.</p>  → 	
<p>9 Record the name within 1 minute.</p>	<p>10 Press JOYSTICK.</p> 	<p>11 Select "Save", then "Saved" is displayed.</p> 

Cordless Telephone

- To continue editing other caller information, repeat from step 2.
- If you confirm the recorded name, select "Audible Call", then press  in step 3.

◆ Deleting Caller Information



To exit the operation, press  at any time.


<p>1 Press LEFT SOFT KEY. To select the base unit phonebook, press LEFT SOFT KEY again.</p> 	<p>2 Select the desired item.</p>  → 	<p>3 Select "Delete".</p>  → 
<p>4 Select "Yes", then "Deleted" is displayed.</p>  → 		

- To continue deleting other caller information, repeat from step 2.
- If there are no items stored in the phonebook when searching for the desired item, the display shows "Memory Empty".

Using the Phonebook

◆◆ Hot Keys

You can assign the dialling buttons  through  as hot keys. You can choose 9 phone numbers from the handset phonebook.

To exit the operation, press  at any time.

◆ Registering a Phone Number as a Hot Key

1 Press **LEFT SOFT KEY**.



2 Select the desired item.



3 Select "Reg. to Hot Key".




4 Select the desired dialling button number.



5 Select "Save", then "Saved" is displayed.

 


- If there are no items stored in the phonebook when searching for the desired item, the display shows "Memory Empty".
- If an item is already assigned to a hot key, "✓" will be displayed on the left of the key number. If a hot key number with "✓" is selected, press  to select "Overwrite".

◆ Dialling with a Hot Key

1 Press and hold the dialling button registered as a hot key until a phone number is displayed.

2 Press **TALK** or **SPEAKERPHONE**.



◆ Deleting the Hot Key Registration

1 Press and hold the dialling button registered as a hot key until a phone number is displayed.

2 Press **JOYSTICK**.



3 Select "Delete".



4 Select "Yes", then "Deleted" is displayed.




- Phonebook registration will not be erased when hot key registration is deleted.







SMS Feature (Text Message)

You can send and receive text messages between other fixed and mobile phones that also support a compatible SMS feature and network.

The SMS feature is only available after subscribing to Caller ID.

◆◆ Writing and Sending a New Message

To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "✉ SMS".  → 	3 Select "Create".  → 
4 Enter Message (p. 33, 34).	5 Press JOYSTICK , then "Destination" is displayed. 	
Go to step 6.		

Cordless Telephone




◆ Entering a Number Manually

Follow steps 1 to 5 shown above, then:

6 Enter Phone Number. (max. 20 digits)	Press JOYSTICK . 
Go to step 7 on the next page.	

◆ Entering a Number from the Phonebook

Follow steps 1 to 5 shown above, then:

6 Press LEFT SOFT KEY . 	Select the desired item (p. 27).  →  twice
Go to step 7 on the next page.	

SMS Feature (Text Message)

◆ Entering a Number from the Caller ID List

Follow steps 1 to 5 on the previous page, then:

6 Select the desired item.



Go to step 7.

◆ Entering a Number from the Redial List

Follow steps 1 to 5 on the previous page, then:

6 Press **RIGHT SOFT KEY**.



Select the desired item.



Go to step 7.

Follow steps 1 to 6 on previous page and above, then:

7 "Save?" is displayed, then select "Yes" or "No".
(If "Yes" is selected, "Saved Message" is displayed.)




 

 


8 Select "Send".



- "Sending Message" is displayed after step 8. The display returns to the standby mode, then "Transferring Message" is displayed.
- If the base unit does not have sufficient memory to send a message, the display will show "SMS lists are memory full. Delete messages.". The unit will then return to the function menu.
- Once you have created an SMS message, the unit will display "▲Use Last Text?" each time you select "Create". If you want to use the text of the last message sent once again, move the **JOYSTICK** up to recall the last message.
- If you try to send a message using a phone number (Destination) over 20 digits long from one of the Phonebook, Caller ID or Redial lists, "Invalid Number" is displayed and the display returns to "<Enter Phone No>".
- The maximum message length is 160 characters. Please consult your SMS service provider for further details.
- 69 messages can be memorized when you enter 80 characters/1 message.
- If your phone is connected to PBX (Private Branch eXchange: private branch exchange), see page 41 to enter a destination number.

SMS Feature (Text Message)

◆◆ Text Entry


Keys	Operations
	Move the JOYSTICK up, down, left or right to move the cursor.
	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added at the beginning.)
	Press to delete characters. (Character on the cursor is deleted. To delete all characters, press and hold.)
	Press to change between upper and lower case.
	Press to insert a blank space (except when in Numeric input mode).
	Press to insert a symbol (*, #, /, etc.) (except when in Numeric input mode).

Cordless Telephone

◆ Selecting the Input Mode

There are 5 text input modes: **LetterWise®** (default mode), Alphabet (ABC), Numeric (0-9), Greek (ΑΒΓ) and Extended (ÄÅÄ). The function icon above the key displays the current input mode. For the full character map, see **SMS Character Table** (p. 91).

To change the input mode while inputting a message, press **RIGHT SOFT KEY**.

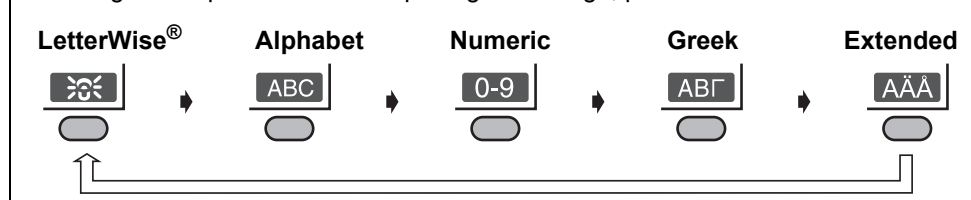

- If **LetterWise®** (see next page) is selected, select a language you require (p. 53).

SMS Feature (Text Message)

◆◆ Entering Text in LetterWise® Mode

LetterWise® is the default input mode. **LetterWise®** is a simplified text entry system. This system suggests to the user the most likely letter to follow the text entered previously.

Inserting Operations
Enter letters by pressing (ABC2) - (WXYZ9).
If the letter displayed is not correct, change the letter by pressing (#) (possibly several times).
Continue writing the word always checking that the letters displayed are correct and change them if necessary.
To insert symbols, use (1). If the symbol you want does not appear, press (#) repeatedly until the required symbol appears.


Example (When the language choice is English)

To enter "hello".







1 Press (↵) to change to the small letter.	<Enter Message>
2 Press (GHI4). "i" is the most frequent first letter of a word.	i
3 Press (#) to display the next candidate letter. "h" is the second most frequent letter.	h
4 Press (DEF3). "e" is most frequent letter.	he
5 Press (JKL5). "l" is most frequent letter.	hel
6 Press (JKL5). "l" is most frequent letter.	hell
7 Press (MNO6). "o" is most frequent letter.	hello

SMS Feature (Text Message)

◆◆ Reading/Displaying Messages in the Outgoing List

You can display saved messages in date/time order.
To exit the operation, press  at any time.


◆ Reading/Displaying Messages

1 Press JOYSTICK (or move). 	2 Select "SMS". 	3 Select "Send List". 
4 Select the desired message. 	5 Scroll through the message to read/display . 	6 Press JOYSTICK . 

Go to step 7.



◆ Sending a Message

Follow steps 1 to 6 shown above, then:

7 Select "Send".
 → Follow from step 6 of **Writing and Sending a New Message** (p. 31, 32).

◆ Deleting a Message


Follow steps 1 to 6 shown above, then:

7 Select "Delete".
 → **8** Select "Yes", then "Deleted" is displayed.


- You can also delete by pressing  then select "Yes" on step 4.

◆ Editing a Message

Follow steps 1 to 6 shown above, then:

7 Select "Edit Message".
 → Edit Message, then follow from step 5 of **Writing and Sending a New Message** (p. 31).

SMS Feature (Text Message)

◆◆ Receiving a Text Message

When a new message has been received, the display shows the following and a tone sounds. The number indicates how many mails were received.

Receiving
New SMS




H/set 1
☒ 1 SMS
17.8 14:59


- When the SMS message memory is full, "Full" is displayed. No messages can be received if the memory is full.

SMS Feature (Text Message)


◆◆ Reading/Displaying Messages in the Incoming List

To exit the operation, press  at any time.


1 Press **JOYSTICK** (or move).




2 Select "SMS".




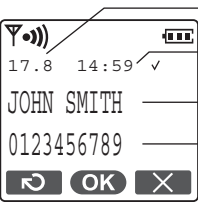
3 Select "Receive List".



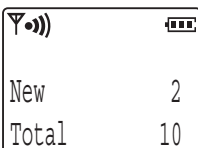

4 Move the **JOYSTICK** down.

- The most recent sender's details are displayed.
- If the name and number have been stored in the phonebook, the name is also displayed.
- You can delete a message by pressing  then selecting "Yes".




Date Received

Time Received


Name

Tel. No.

5 Select the desired message.



6 Scroll through the message to read/display.











Go to step 7 on pages 38 and 39.

- If there is a "✓" icon placed against the time, this means the message has been read or displayed previously.
- If the list is accessed and no messages have been received, "Receive List Memory Empty" is displayed.
- If the base unit does not have sufficient memory to receive a message, the display will show "SMS lists are memory full. Delete messages."
- Certain SMS service providers may attach a 1-digit number to the sender's phone number. If so, the name will not be displayed even if the name and number have been stored in the phonebook.

SMS Feature (Text Message)

◆ Replying to a Message

Follow steps 1 to 6 on the previous page, then:

- | | | |
|---|--|---|
| 7 Press JOYSTICK .
 | 8 Select "Reply".
 →  | 9 Enter Message.
 |
| 10 Press JOYSTICK twice.
 twice | 11 "Save?" is displayed, then select "Yes" or "No".
(If "Yes" is selected, "Saved Message" is displayed.)
 →  | 12 Select "Send".
 →  |

- "Sending Message" is displayed. The display returns to the standby mode, then "Transferring Message" is displayed.
- If the base unit does not have sufficient memory to send a message, the display will show "SMS lists are memory full. Delete messages."

◆ Deleting a Message

Follow steps 1 to 6 on the previous page, then:

- | | | |
|---|--|--|
| 7 Press JOYSTICK .
 | 8 Select "Delete".
 →  | 9 Select "Yes", then "Deleted" is displayed.
 →  |
|---|--|--|

SMS Feature (Text Message)

◆ Editing a Message

Follow steps 1 to 6 on page 37, then:

7 Press **JOYSTICK**.



8 Select "Edit Message".



9 Edit Message, then follow from step 5 of **Writing and Sending a New Message** (p. 31).

◆ Storing the Sender's Phone Number in the Phonebook

Follow steps 1 to 6 on page 37, then:

7 Press **JOYSTICK**.



8 Select "Save Phonebook".



9 Follow steps 4 to 9 of **Storing Caller Information** (p. 24).

◆ Editing the Sender's Phone Number for Calling

Follow steps 1 to 6 on page 37, then:

7 Press **JOYSTICK**.



8 Select "Edit for Call".



9 Edit Phone Number.
(max. 24 digits)

 
10 Press **JOYSTICK**, **TALK** or **SPEAKERPHONE**.



◆ Calling the Message Sender

Follow steps 1 to 5 (or 4) on page 37, then:

6 Press **TALK** or **SPEAKERPHONE**.



SMS Feature (Text Message)


◆◆ Changing the SMS Service Centre Numbers












To send and receive SMS text messages, you need your SMS Message Centre telephone numbers.

Two numbers have been preset in your phone.

The phone number for SMS Message Centre 1 is used to SEND text messages while the number for Message Centre 2 is used to RECEIVE text messages.

You can change the preset numbers if required.

To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "SMS".  SMS.  → 	3 Select "Parameters".  → 
4 Enter 4-digit Base Unit PIN. (Factory Preset 0000)	5 Select Message Centre 1 or 2.  → 	6 Erase the current number by pressing  , then enter the new Message Centre number.
7 Press JOYSTICK . 	8 Select "Save", then "Saved" is displayed. 	

For your reference, these are the numbers that have been preset in your phone.


Message Centre 1: 0673644444

Message Centre 2: 0673644440

- If your phone is connected to a PBX, you need to add the PBX line access number (and a dialling pause) to the Message Centre 1 phone number.

SMS Feature (Text Message)

◆◆ Setting the PBX Line Access Number

This feature is only for the phones connected to a PBX. This allows you to delete automatically the PBX line access number (max. 4 digits) when you enter the destination phone number of an SMS outgoing message from Phonebook, Redial or Caller ID lists. To exit the operation, press  at any time.

Follow steps 1 to 3 on the previous page, then:

4 Enter 4-digit Base Unit PIN.
(Factory Preset 0000)

5 Select "PBX Prefix".



6 Select "On".



7 Enter Line Access Number.
(max. 4 digits)


8 Press JOYSTICK.



9 Select "Save", then "Saved" is displayed.



◆◆ Turning the SMS Feature On/Off

To exit the operation, press  at any time.

Follow steps 1 to 3 on the previous page, then:

4 Enter 4-digit Base Unit PIN.
(Factory Preset 0000)

5 Select "SMS On/Off".



6 Select "On" or "Off".



When the SMS feature is turned off;

- If you send a message, a tone sounds and the message will return to the SMS incoming list with "FD" attached.
- If you receive from SMS centre call, the message will not be received but SMS centre phone number will remain in the Caller ID list.

- If you turn the SMS feature on, the unit will begin ringing (one ring) after other connected telephones.
- The factory preset is "On".

Settings Menu Chart

◆◆ Handset Settings Menu Chart

1st Menu	2nd Menu	3rd Menu
Setting Handset	Set Date/Time	
	Memo Alarm	
	Ringer Option	Ringer Volume
		EXT Ringer Type
		INT Ringer Type
		Paging Tone
		Private Ring
	Tone Option	Key Tone
	Display Option	Standby Display
		Talk Display
		Select Language
		Private Colour
		Category Name
	Call Option	Call Bar
		Direct Call No.
		Direct On/Off
	Registration	Register H/set
		Cancel Base
	Select Base	Auto
		Base 1
		⋮
		Base 4
	Other Option	Change H/S PIN
		Change H/S Name
		Auto Talk
		LetterWise
		Battery Type
		Reset Handset

Settings Menu Chart

◆◆ Base Unit Settings Menu Chart


1st Menu	2nd Menu	3rd Menu
Setting Base	Ringer Option	Ringer Volume
	Call Option	Recall
		Pause Time
		Emergency Call
		Set ARS
		Call Restricted
	Cancel Handset	
	Other Option	Change Base PIN
		Reset Base

Cordless Telephone

Handset Settings


◆◆ Memo Alarm

Set the date and time before setting the memo alarm (p. 13).

To exit the operation, press  at any time.

1 Press **JOYSTICK** (or move).



2 Select " Setting Handset".



3 Select "Memo Alarm".



4 Select the desired alarm number (1-3).



Go to step 5.

◆ Setting the Alarm Mode "Once" or "Daily"

Follow steps 1 to 4 shown above, then:

5 Select "Once" or "Daily".



6 "Once": Enter the date and the time.
"Daily": Enter the time.

7 Press **JOYSTICK**.



8 Enter a memo message (max. 32 characters, p. 26) then press **JOYSTICK**.



9 Select the desired ringer pattern.



10 Select "Save", then "Saved" is displayed.



- When setting the time, remember to select 12 or 24 hour clock (p. 13).
- Memo Alarm volume depends on handset ringer volume. Even if you set ringer to off, only Memo Alarm still rings.
- When in talk or intercom mode, the alarm will not sound until the call is ended.

Handset Settings

◆ Setting the Alarm "Off"

Follow steps 1 to 4 on the previous page, then:

5 Select "Off".



6 Select "Save", then "Saved" is displayed.



- The factory preset is "Off".
- To delete the displayed memo alarm, press then select "Yes" on step 4 on the previous page.

◆ To Stop the Alarm


(The Alarm sounds: Max. 3 minutes) ➔ Press .

- You can also stop the alarm by pressing , , to , , or .
- If "Once" is selected, the setting is turned off.

Handset Settings

◆◆ Ringer Options

There are 15 ringer patterns available on each ringer. "Ringer 1" to "Ringer 6" are the bell ringer patterns. "Ringer 7" to "Ringer 15" are the preset melody patterns as shown below. The music data in this product belongs to M-ZoNE Co., Ltd.

To exit the operation, press  at any time.


Ringer No.	Ringer Pattern or Name	
1 ~ 6	Bell Patterns	
Ringer Pattern 7 to 15: Preset Melody Patterns		
7	Symphony No.5 in C minor	*
8	Air on G String	
9	Wholetemperiere Clavier 1 Teil No 1 Fuga Das	
10	Fantaisie Impromptu	
11	Allegro Spring/The Four Seasons	
12	Also Sprach Zarathustra	
13	Liebestraum	
14	Polovetsian Dance	
15	24 Caprices	











* © 2003 M-ZoNE Co., Ltd.

- If you select one of the melody ringer patterns, the phone will ring for 5 seconds even if a caller has hung up. Therefore, you may hear a dial tone or no one on the line after you answer a call.

Handset Settings

◆ Setting the Ringer Volume





The choices are 6 levels and off. If you set the volume to OFF, “” is displayed, however, still the volume of a paging and intercom call are level 1.

1 Press JOYSTICK (or move). 	2 Select “  Setting Handset”.  → 	3 Select “Ringer Option”.  → 
4 Select “Ringer Volume”.  → 	5 To increase volume, move the JOYSTICK up. To decrease volume, move the JOYSTICK down. 	6 Press JOYSTICK . 

- The factory preset is 6.

◆ Selecting the Ringer Pattern for External Call/Internal Call/Paging







Follow steps 1 to 3 shown above, then:

4 Select “EXT Ringer Type”, “INT Ringer Type” or “Paging Tone”.  → 	5 Select the desired ringer pattern.  → 
---	---

- The factory preset is 1.

◆ Selecting the Ringer Pattern for Private Ring

Follow steps 1 to 3 shown above, then:


4 Select “Private Ring”.  → 	5 Select the desired category.  → 	6 Select the desired ringer pattern.  → 
--	--	--










- The factory preset of each ringer pattern is 1.

Handset Settings

◆◆ Setting the Handset Key Tone ON/OFF


You can turn the key tone ON/OFF.







To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "  Setting Handset".  → 	3 Select "Tone Option".  → 
4 Press JOYSTICK to select "Key Tone". 	5 Select "On" or "Off".  → 	

- The factory preset is "On".





◆◆ Display Options

To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "  Setting Handset".  → 	3 Select "Display Option".  → 
Go to step 4.		

◆ Selecting the Standby Mode Display

Follow steps 1 to 3 of **Display Options** shown above, then:

4 Select "Standby Display".  → 	5 Select "Base Number", "Handset Name" or "Off".  → 
---	---

- The factory preset is "Handset Name".

Handset Settings

◆ Selecting the Talk Mode Display

Follow steps 1 to 3 of **Display Options** on the previous page, then:

4 Select "Talk Display".



5 Select "Talk Time" or "Phone Number".



- Even if you select "Phone Number", the length of the call will appear on your display when you receive calls.
- The factory preset is "Talk Time".

◆ Setting the Private Colour

Follow steps 1 to 3 of **Display Options** on the previous page, then:

4 Select "Private Colour".



5 Select the desired category.



6 Select Private Colour "Green", "Red" or "Orange" for each category.



- The factory preset is "Green".
- When you select the private colour on step 6, the Ringer LED will flash at the selected colour.

◆ Changing the Private Category Name

Follow steps 1 to 3 of **Display Options** on the previous page, then:

4 Select "Category Name".s



5 Select the desired category.




6 Edit Category Name (p. 26).
(max. 10 characters)







7 Press **JOYSTICK**.



Handset Settings





◆◆ Call Options


To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "  Setting Handset".  → 	3 Select "Call Option".  → 
Go to step 4.		



◆ Call Bar ON/OFF







When this feature is set to ON, outgoing calls cannot be made. Intercom calls and calls to numbers assigned as emergency numbers can be made (see **Setting the Emergency Calls** on page 58).


Follow steps 1 to 3 shown above, then:		
4 Select "Call Bar".  → 	5 Enter 4-digit Handset PIN. (Factory Preset 0000)	6 Select "On" or "Off".  → 

- While the Call Bar mode is turned on, " " is displayed.

◆ Setting the Direct Call Number

After a direct call number has been set and the feature has been turned on, you can dial only the direct call number by pressing  or . **When this feature is ON, emergency calls cannot be made.** However, incoming calls can be answered.

Follow steps 1 to 3 shown above, then:		
4 Select "Direct Call No.".	5 Enter Direct Call Number. (max. 24 digits)	6 Press JOYSTICK .
 → 		
7 Select "Save".	8 Select "On".	
	 → 	

- While the direct call mode is turned on, " " is displayed.

Handset Settings

◆ Setting the Direct Call ON/OFF


Follow steps 1 to 3 on the previous page, then:

4 Select "Direct On/Off".



5 Select "On" or "Off".




- If the direct call mode is turned off, "●" will disappear.
- If you did not set the Direct Call Number and select "On" in step 5, "<Enter Phone No>" will be displayed. Enter the number, then press  twice.

Cordless Telephone

Handset Settings

◆◆ Other Options

To exit the operation, press  at any time.

1 Press **JOYSTICK**
(or move).



2 Select " Setting
Handset".



3 Select "Other
Option".



Go to step 4.

◆ Changing Handset PIN (Personal Identification Number)

The factory preset is 0000.

Once you have programmed the handset PIN, you cannot confirm it. We recommend you write down the handset PIN. If you forget it, please consult your nearest Panasonic Service Centre. 070 - 3314500

Follow steps 1 to 3 shown above, then:

4 Select "Change H/S PIN".



5 Enter current 4-digit Handset PIN.

6 Enter new 4-digit Handset PIN.

7 Enter new 4-digit Handset PIN again
to verify.

Handset Settings

◆ Changing Handset Name

Follow steps 1 to 3 on the previous page, then:

4 Select "Change H/S Name".



5 Edit Handset Name.
(max. 10 characters)

6 Press **JOYSTICK**.



◆ Setting Auto Talk ON/OFF

Follow steps 1 to 3 on the previous page, then:

4 Select "Auto Talk".



5 Select "On" or "Off".



- The factory preset is "Off".

◆ Changing the LetterWise® Language

Follow steps 1 to 3 on the previous page, then:

4 Select "LetterWise".



5 Select the desired language.



- The factory preset is "Nederlands".

◆ Setting the Battery Type

Follow steps 1 to 3 on the previous page, then:

4 Select "Battery Type".



5 Select "Ni-Cd" or "Ni-MH".



- The factory preset is "Ni-MH".

Handset Settings

◆ Resetting the Handset Settings

You can reset all of the handset settings to their initial settings.

1 Press **JOYSTICK**
(or move).



2 Select "Setting
Handset".



3 Select "Other Option".



4 Select "Reset
Handset".



5 Enter 4-digit Handset
PIN.
(Factory Preset 0000)

6 Select "Yes", then
"Gewist" is displayed.



Handset Settings


Handset Initial Settings










Functions	Initial Settings
Memo Alarm Mode	OFF
Alarm Time	Delete
Handset Ringer Volume	6
Handset External Ringer Pattern	1
Handset Internal Ringer Pattern	1
Handset Paging Tone Pattern	1
Handset Private Ringer Pattern	1
Handset Alarm Tone Pattern	1
Key Tone	ON
Standby Mode Display	Handset Name
Talk Mode Display	Talk Time
Display Language	Dutch
Call Bar Mode	OFF
Direct Call Mode	OFF
Direct Call Number	Delete
4-Digit Handset PIN	0000
Auto Talk	OFF
Select Base	Automatic Base Unit Selection
Redial Memory	Delete All
Handset Receiver Volume	Medium
Walkie-Talkie Setting	Group
SMS Text Input Mode	LetterWise®
LetterWise® Language	Dutch
Phonebook List	Remain
LED Colour of Private Category	Green
Battery Type	Ni-MH

Cordless Telephone

Base Unit Settings

◆◆ Setting the Base Unit Ringer Volume


To exit the operation, press  at any time.






1 Press JOYSTICK (or move). 	2 Select "Setting Base".  → 	3 Enter 4-digit Base Unit PIN. (Factory Preset 0000)
4 Select "Ringer Option".  → 	5 Select "Ringer Volume".  → 	
6 To increase volume, move the JOYSTICK up. To decrease volume or set to OFF, move the JOYSTICK down. (3 levels) 		7 Press JOYSTICK . 

- The factory preset is medium.

Base Unit Settings

◆◆ Call Options





To exit the operation, press  at any time.

- | | | |
|---|---|---|
| 1 Press JOYSTICK
(or move).
 | 2 Select "Setting
Base".
 →  | 3 Enter 4-digit Base
Unit PIN.
(Factory Preset 0000) |
| 4 Select "Call Option".
 →  | | |
| Go to step 5. | | |

◆ Selecting the Recall Time

You can change the duration of the recall time depending on the requirements of your Network provider or PBX.

Follow steps 1 to 4 shown above, then:


- | | |
|--|--|
| 5 Select "Recall".
 →  | 6 Select "Type 1" (700 ms), "Type 2" (110 ms) or
"Type 3" (200 ms).
 →  |
|--|--|

- The factory preset is "Type 2" (110 ms).

◆ Selecting the Pause Time

You can select the pause time to 3 or 5 seconds, depending on your PBX requirements.

Follow steps 1 to 4 shown above, then:

- | | |
|--|--|
| 5 Select "Pause Time".
 →  | 6 Select "Short" (3 sec.) or "Long" (5 sec.).
 →  |
|--|--|

- The factory preset is "Short".

Base Unit Settings

◆ Setting the Emergency Calls

Even if handset is in Call Bar Mode, you can make an emergency call.

Follow steps 1 to 4 on the previous page, then:

5 Select "Emergency Call".



6 Select "Emergency Call1" to "Emergency Call5".



7 Enter Emergency Call Number.

8 Press JOYSTICK.



- The factory preset is 112.

◆ Call Restriction

You can restrict selected handset(s) from dialling selected phone numbers. You can assign up to 6 call restriction numbers (up to 8 digits). If you dial a restricted number, the call does not connect and the restricted number flashes.

Follow steps 1 to 4 on the previous page, then:

5 Select "Call Restricted".



6 Search and press **RIGHT SOFT KEY** to attach (or cancel) "✓" to the desired Handset(s) to restrict.



7 Press JOYSTICK.



8 Select the restricted Number item (1-6).



9 Enter the restricted phone number (up to 8 digits).

10 Press JOYSTICK.



NOTE: When you put a first digit on step 9, it must overwrite the current displayed numbers. We recommend you to write down the restricted phone number you entered.

Base Unit Settings

◆◆ Automatic Route Selection

Automatic Route Selection is a feature which selects the least expensive carrier (network) service available, when making long distance calls.

When area code(s) have been related to carrier code, you will need only dial the area code, the lower costing carrier (network) will automatically be dialled.

Please contact your telephone company regarding the carrier telephone charges.

◆ Storing the Carrier Code

Firstly you must subscribe to a second carrier (network) service. Then store the code as follows:

Follow steps 1 to 4 on page 57, then:

5 Select "Set ARS".



6 Select "Set Carrier".



7 Select "On".



8 Enter Carrier Code.
(max. 7 digits)

9 Press JOYSTICK.



Cordless Telephone

- To turn the feature off, select "Off" in step 7.

◆ Storing the Area Code(s)/Country Code(s)

Store the area code(s) for which the chosen carrier (network) service charge rates are higher than the original carrier (network) service. Up to 25 area codes can be stored. If you do not store any area codes, all phone numbers will be dialled with the second carrier code.

Follow steps 1 to 4 on page 57, then:

5 Select "Set ARS".



6 Select "Set Area Code".



7 Select the desired Area Code Number (1-25).



8 Enter Area Code.
(max. 5 digits)

9 Press JOYSTICK.



Base Unit Settings

◆ International Carrier Services

Automatic Route Selection (ARS) is also used for international calls.

After subscribing to a second international carrier service, store the second international carrier code.

For certain countries, the second international carrier service costs more than the first carrier service.

Store "00 (international code)" and then country codes (up to 25 codes) instead of area codes.

If you have stored a phone number beginning with "00" in the phonebook and you use a second carrier service which does not require "00", turn the delete mode ON.

◆ To Turn the International Code "00" Delete Mode ON/OFF

Some international carrier services do not require "00" before the country code.

In this case turn the delete mode ON. "00" will automatically be deleted when dialling. The factory preset is OFF.

Follow steps 1 to 4 on page 57, then:

5 Select "Set ARS".



6 Select "Delete Intl No.".




7 Select "On" or "Off".



Base Unit Settings

◆◆ Other Options

To exit the operation, press  at any time.

1 Press **JOYSTICK**
(or move).



2 Select " Setting
Base".



3 Enter 4-digit Base
Unit PIN.
(Factory Preset
0000)

4 Select "Other Option".



Go to step 5.

◆ Changing the Base Unit PIN (Personal Identification Number)

The factory preset is 0000.

Once you have programmed the base unit PIN, you cannot confirm it. We recommend you write down the base unit PIN. If you forget it, please consult your nearest Panasonic Service Centre. 070 - 3314500

Follow steps 1 to 4 shown above, then:

5 Select "Change Base
PIN".



6 Enter new 4-digit Base
Unit PIN.

7 Enter new PIN again
to verify.

◆ Resetting the Base Unit Settings

You can reset all of the base unit settings to their initial settings.

Follow steps 1 to 4 shown above, then:

5 Select "Reset Base".



6 Select "Yes", then "Deleted" is
displayed.



Base Unit Settings

Base Unit Initial Settings

Functions	Initial Setting
Recall Time	Type 2 (110 ms)
Pause Time	Short (3 seconds)
Emergency Call Number	112
Call Restricted Handset(s)	Delete All
Call Restriction Number(s)	Delete All
4-Digit Base Unit PIN	0000
Base Unit Ringer Volume	Medium
SMS Message Centre Number 1	0673644444
SMS Message Centre Number 2	06736444440
Caller ID List	Delete All
SMS Message Lists	Delete All
SMS PBX Line Access Number Support ON/OFF	OFF
SMS PBX Line Access Number	Delete All
SMS Feature	ON
Carrier Code	Delete All
Area Code	Delete All
International Code "00"	OFF
Date/Time	31-12-03/00:00
Answering System	ON
Your Own Greeting Message	Remain
Caller's Recording Time	No Limit
Number of Rings	4 Rings
Greeting Monitor	ON
Remote Code	Delete (OFF)
Incoming/Memo Message(s)	Remain


Multi-Unit User Operations

◆◆ Operating Additional Handsets

Additional **KX-TCA151EX** handsets are available for purchase separately. Up to 6 handsets can be registered to a single base unit. Using additional handsets allows you to have an intercom call while simultaneously conducting a call to an outside line.

◆◆ Operating Additional Base Units

You can register and operate your handset with up to 4 base units. Each base unit forms 1 radio cell. If the individual bases are linked to the same telephone line then you can extend the operating range of the system by positioning the bases so that the two radio cells overlap. If the handset is set to auto base selection, then in standby mode the handset will automatically swap to the second base if the range on the first base is exceeded. It is not possible to transfer calls between bases (only between handsets linked to the same base unit).

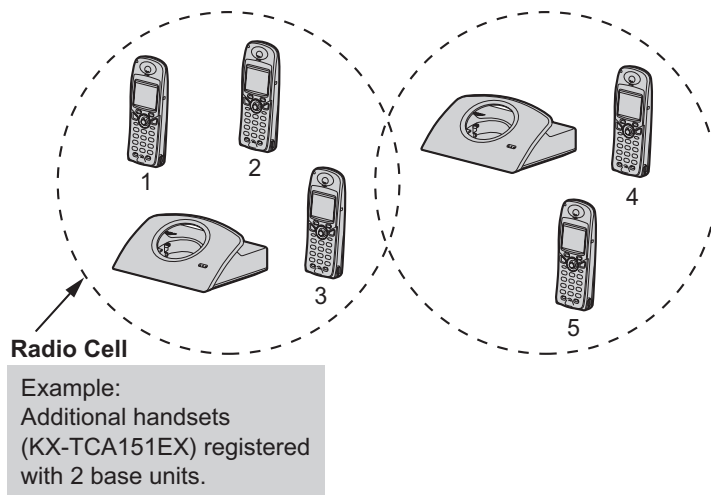



NOTE: Calls are disconnected when the handset moves from one radio cell to another.

 
Multi-Unit User Operations










 



◆◆ Handset Registration to a Base Unit


The handset supplied with the base unit is already registered. If an optional handset is purchased, it must be registered as follows.

Charge the optional handset batteries for 7 hours before initial use.

Handset registration must be completed within 1 minute after pressing . If over 1 minute, press  then start over again.

To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "  Setting Handset".  → 	3 Select "Registration".  → 
4 Select "Register H/set".  → 	5 Press and hold  on the Base Unit (for about 3 seconds) until the tone sounds. • If all registered handset(s) start ringing (paging), press  to stop paging then start over again.	
6 Select the desired base unit.  → 	7 Enter 4-digit Base Unit PIN. (Factory Preset 0000)	8 Press JOYSTICK . 


When a handset is registered successfully, a confirmation tone sounds and the  icon is displayed.










- If you enter the incorrect Base Unit PIN, an error tone sounds and repeat from step 1.
- The handset main menu may change corresponding to the base unit registered to.

Multi-Unit User Operations

◆ Cancelling a Handset

Each handset can cancel itself or another handset. This feature is usually used to cancel a link between Handset and Base Unit.


To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "Setting Base".  → 
3 Enter 4-digit Base Unit PIN. (Factory Preset 0000)	4 Select "Cancel Handset".  → 
5 Search and press RIGHT SOFT KEY to attach "✓" to the handset(s) to cancel.  → 	6 Press JOYSTICK .  → 









Cordless Telephone

◆ Cancelling a Base Unit

If another handset is out of range and/or power is OFF when **Cancelling a Handset**, the previous base unit number will still remain in the cancelled handset. Therefore, you need to cancel the base unit registered in the cancelled handset.

To exit the operation, press  at any time.

Follow steps **1** to **3** on the previous page, then:


4 Select "Cancel Base".  → 	5 Enter 4-digit Handset PIN. (Factory Preset 0000)
6 Search and press RIGHT SOFT KEY to attach "✓" to the base unit to cancel.  → 	7 Press JOYSTICK .  → 
8 Select "Yes", then "Deleted" is displayed.  → 	









Multi-Unit User Operations

◆◆ Base Unit Selection

When "Auto" (Automatic Base Unit Selection) is selected, the handset automatically searches for other registered base units if you move outside of the radio range of the current base unit.

When a specified base unit is selected, the handset will access that base unit only. Calls (both incoming and outgoing) can be conducted only via the selected base unit, even if the radio cells overlap with neighbouring base units.


To exit the operation, press  at any time.

1 Press JOYSTICK (or move). 	2 Select "  Setting Handset".  → 
3 Select "Select Base".  → 	4 Select "Auto" or the desired base unit.  → 





◆◆ Intercom Between Handsets

You can use your handsets as a 2-way intercom.

Intercom calls can be conducted within the radio cell of the current base unit, but not with units in neighbouring radio cells.

To exit the operation, press  at any time.

◆ For example, when Handset 1 calls Handset 2:

<Handset 1>	<Handset 2>
1 Press INTERCOM  , then press the desired handset number  .	
2	Press TALK  .

- You can also answer a call by pressing ,  to , ,  or  instead of pressing  (**Any Key Talk**).


◆ Terminating a Call

<Handset 1 or 2>	3 Press TALK OFF  .
------------------	--






Multi-Unit User Operations

◆◆ Transferring a Call to Another Handset





 





The intercom can be used during a call to transfer an external call between handsets that are registered to the same base unit.

To exit the operation, press  at any time.

◆ For example, when Handset 1 transfers a call to Handset 2:

	<Handset 1>	<Handset 2>
	(During a call)	
1	Press INTERCOM  , then press the desired handset number  .	
2		Press TALK  .
	(Conversation between handset 1 and 2)	
3	Press TALK OFF  .	
		(Conversation between outside line and Handset 2)

 
Cordless Telephone

- You can also answer a call by pressing ,  to , ,  or  instead of pressing  (**Any Key Talk**).
- If you press  after pressing the desired handset number, a call can be transferred to another handset without speaking to another handset.
If the transferred call is not answered within 60 seconds, Handset 1 will ring again.
- When Handset 2 answers a call transferred, press  to complete a call transfer or press  to establish a **Conference Call**.

















Multi-Unit User Operations

◆◆ Phonebook Copy

You can copy information in the handset phonebook between handsets registered to the same base unit. The phonebook copy must be performed while in intercom mode (see **Intercom Between Handsets** on page 66).


To exit the operation, press  at any time.

◆ Copying an Item



	<Handset 1: Receiver> (During an intercom call)	<Handset 2: Sender> (During an intercom call)
1	Press JOYSTICK .  	
2	Select "Recv Phonebook". "Start Copying" is displayed.  →  	
3		Press JOYSTICK .  
4		Select "Send Phonebook".  →  
5		Select the desired item to copy.  →  
6		Select "Copy One Item" then "Start Copying" is displayed.  →  

Multi-Unit User Operations

◆ Copying All Items

To exit the operation, press  at any time.

Follow steps 1 to 4 on the previous page, then:

	<Handset 1: Receiver>	<Handset 2: Sender>
5		Press JOYSTICK . 
6		Select "Copy All Items".  → 

- When copying is completed, a beep sounds and "Copy Complete" is displayed. After a few seconds, the display will return to the intercom call. "Copy Incomplete" will be displayed if the receiver handset memory is full. If "Copy Failure" is displayed on the sender handset, the receiver did not prepare for copying.
- If you move the **JOYSTICK** up or down before pressing **JOYSTICK** at step 5, all items will not be copied. The items, from the item indicated now to the last item, are copied.

Cordless Telephone

Walkie-Talkie

The Walkie-Talkie feature allows handsets to communicate with each other outside the range of the base unit. When the handsets are in Walkie-Talkie mode, external calls cannot be received. Only **KX-TCA151EX** with Walkie-Talkie feature can communicate with one another.

Talk time in this mode is approximately 6 hours. Standby time in this mode is approximately max.15 hours. (It changes by the use conditions.) When using the handset in Walkie-Talkie mode, we recommend keeping the handset turned off, turning it on only when talking in Walkie-Talkie mode. Turning the handset off immediately after use will improve battery operating time.

Range:

The maximum range between two handsets while in Walkie-Talkie mode is up to 300 metres outdoors.

◆◆ Setting the Walkie-Talkie Mode

You can set the Walkie-Talkie mode. There are two types: Common Base Station mode and Group mode. The factory preset is Group mode.


- In Common Base Station mode, communication is possible between handsets registered to a common base unit. If the handsets are registered to more than one base unit, the same base unit must be selected.







Please note, the feature will not operate if AUTO is set in the base unit selection.

If Common Base Station mode is selected and the handset is not registered to a base unit, an error tone sounds.

- In Group mode, communication is possible between handsets that are both set to this mode and whose Group IDs are common.
This allows handsets to communicate in Walkie-Talkie mode regardless of which base unit they are registered to.

Walkie-Talkie

To exit the operation, press  at any time.

<p>1 Press JOYSTICK (or move).</p> 	<p>2 Select "Walkie-Talkie".</p> 
<p>3 Select "Setting".</p> 	<p>4 Select "Common" or "Group".</p> 
<p>When "Group" is selected;</p>	
<p>5 Enter 3-digit Group Code. (Factory Preset 000)</p>	<p>6 Press JOYSTICK.</p> 
<p>7 Enter Handset Number. (1-9: Factory Preset is 1.)</p>	<p>8 Press JOYSTICK twice.</p>  twice

Cordless Telephone


- If you select "Group", enter Group Code (this can be 3 digits of your choice - the factory preset is 000). Make note of your code.
- The factory preset of Handset Number is 1.

IMPORTANT: Each handset should have its own unique number.

Walkie-Talkie

◆◆ Turning the Walkie-Talkie Mode On/Off

To use the Walkie-Talkie feature, all handsets in conversation must be in Walkie-Talkie mode.

To exit the operation, press  at any time.

◆ To Turn the Walkie-Talkie Mode On

1 Press **JOYSTICK**
(or move).



2 Select " Walkie-Talkie".



3 Select "On".



- When the Walkie-Talkie mode is ON, the handset number is displayed after "Walkie-Talkie" appears on the display.

◆ To Turn the Walkie-Talkie Mode Off

1 Press **JOYSTICK**.



2 Select "Off".










- This feature is also turned off if you turn power off then on.

◆◆ Talking in Walkie-Talkie Mode

Before proceeding with this function, please ensure Walkie-Talkie mode is turned on, and the appropriate Walkie-Talkie mode has been selected.

For example, Handset 1 is calling Handset 2.

To exit the operation, press  at any time.

<Handset 1>		<Handset 2>
1	Press INTERCOM  ,  or  , then press the desired handset number  .	 Press TALK  .
2		

- You can also answer a call by pressing ,  to , ,  or  instead of pressing  (**Any Key Talk**).

Answering System





If you set the current date and time (p. 13) and set the answering system ON, a synthesized voice announces the date and time and a incoming/memo message was recorded after playback-**Voice Date/Time Stamp**.

The total recording capacity is approximately 30 minutes or 64 messages. Any recorded noise may shorten the recording time up to 3 minutes. The greeting recording time is limited to 2 minutes and 30 seconds. We recommend you to record a brief greeting message in order to leave more time for recording new incoming/memo messages. All messages (greeting, incoming and memo) are stored indefinitely on a "Flash memory" IC chip even if a power failure occurs. All of the messages are saved until you erase them-**Flash Memory Message Backup**.


 


◆◆ Answering System ON/OFF

When you set the answering system ON, a caller can leave his/her messages.

◆ To Set ON

1 Press JOYSTICK (or move). 	2 Select "TAM Operation". 	3 Select "Answer On", then  is displayed. 
--	---	--

◆ To Set OFF









1 Press JOYSTICK (or move). 	2 Select "TAM Operation". 	3 Select "Answer Off", then  disappears. 
---	--	--

Answering System







Answering System

◆◆ Greeting Message

◆ Recording Your Own Greeting Message

1 Press JOYSTICK (or move). 	2 Select "TAM Operation".  → 	3 Select "Record".  → 
4 Select "Record OGM".  → 	5 Record Greeting Message. 20 cm away from the Mic.	6 Press JOYSTICK to finish recording, then the recorded message is played back. 

◆ Selecting the Caller's Recording Time

Follow steps 1 to 2 shown above, then:		
3 Select "Setting TAM".  → 	4 Select "Msg Rec Time".  → 	5 Select "1 Minute" or "No Limit" (up to 30 minutes) or "Greeting Only" (no incoming messages will be recorded).  → 

- The factory preset is "No Limit".

Answering System

◆ Playing back Pre-Recorded/Your Own Greeting Message

If you do not record your own greeting message, one of two pre-recorded messages will be played. A pre-recorded greeting message depends on your selection of the caller's recording time.

When the recording time is set to "1 Minute" or "No Limit" (30 minutes).

- "Hello, we are not available now. Please leave your name and phone number after the beep. We will return your call."

When the recording time is set to "Greeting Only".

- "Hello, we are not available now. Please call again. Thank you for your call."

1 Press **JOYSTICK**
(or move).



2 Select "TAM
Operation".



3 Select "Play OGM".



◆ Deleting Your Own Greeting Message

1 Press **JOYSTICK**
(or move).



2 Select "TAM
Operation".



3 Select "Delete
Message".




4 Select "Delete
OGM".



5 Select "Yes", then "Deleted" is displayed.



- You can also delete your own greeting message by pressing  then selecting "Yes" during playback (see **Playing back Pre-Recorded/Your Own Greeting Message** on this page).

Answering System

◆◆ Selecting the Number of Rings

You can select the number of times the unit rings before the answering system answers a call, from 2 to 7 or Auto (for **Toll Saver**; as shown below).










◆ Toll Saver (When set to "Auto")

When you call the unit from a touch tone telephone:

If the unit answers on the 2nd or 3rd ring, there is at least one new message.

If the unit answers on the 5th or 6th ring, there are no new messages.

Hang up when you hear the 4th ring. This will save you the toll charge for the call.

<p>1 Press JOYSTICK (or move).</p> 	<p>2 Select "TAM Operation".</p>  → 	<p>3 Select "Setting TAM".</p>  → 
<p>4 Select "Number of Rings".</p>  → 	<p>5 Select "Auto" or "2 Rings" to "7 Rings" to select the number of rings.</p>  → 	


- The factory preset is "4 Rings".

Answering System

◆◆ Incoming/Memo Messages

Incoming messages and memo messages are stored in chronological order. New messages cannot be recorded when "Memory full" is heard. We recommend you erase unnecessary messages after each playback to leave more time for recording new message(s).



If new message(s) is (are) recorded,  icon and the number of messages will be displayed.

◆ Playing New Incoming/Memo Message(s)

1 Press **JOYSTICK** (or move).





2 Select " TAM Operation".



3 Select "Play New Msg.".



- Messages are heard from the speaker. To switch to the receiver, press . To switch back to the speaker, press .

◆ Playing All Incoming/Memo Messages

1 Press **JOYSTICK** (or move).



2 Select " TAM Operation".



3 Select "Play All Msg.".



◆ Repeating a Message During Playback

(During a message playback)

1 Move the **JOYSTICK** left.



◆ Skipping a Message During Playback

(During a message playback)

1 Move the **JOYSTICK** right.



◆ Stopping a Message During Playback

(During a message playback)

1 Press **LEFT SOFT KEY**.



Answering System

◆ Selecting the Receiver Volume During Playback

(During a message playback) → **1** Move the **JOYSTICK** up or down.




◆ Deleting One Incoming/Memo Message

(During a message playback) → **1** Press **JOYSTICK**. **2** Select "Delete".

3 Select "Yes", then "Deleted" is displayed.



- You can also delete the message by pressing  then selecting "Yes" during playback (p. 77).

◆ Deleting All Incoming/Memo Messages

1 Press **JOYSTICK** (or move). **2** Select "TAM Operation". **3** Select "Delete Message".

4 Select "Delete All". **5** Select "Yes", then "Deleted" is displayed.



◆ Calling back to the Caller







(During a message playback) → **1** Press **JOYSTICK**. **2** Select "Call Back".



Answering System










◆ Editing a Number for Calling

(During a message playback) →

- 1 Press **JOYSTICK**.

- 2 Select "Edit for Call".
 → 
- 3 Edit Phone Number. (max. 24 digits)
- 4 Press **JOYSTICK**, **TALK** or **SPEAKERPHONE**.
 OR  OR 

◆◆ Monitor Function ON/OFF

When your greeting message is being played to the caller and the caller's message is being recorded, you can listen to it through the handset.

- 1 Press **JOYSTICK** (or move).

- 2 Select "TAM Operation".
 → 
- 3 Select "Setting TAM".
 → 
- 4 Select "Greet Monitor".
 → 
- 5 Select "On" or "Off".
 → 

- The factory preset is "On".

Answering System

◆◆ Answering System Direct Command

You can operate the answering system by pressing dialling buttons as direct command.

1 Press **JOYSTICK**
(or move).



2 Select "TAM
Operation".



3 Select "Play New Msg."
or "Play All Msg.".



Follow steps **1** to **3** shown above, then:

Press 1	To repeat a message.
Press ABC 2	To skip a message.
Press WXYZ 9	To stop a message playback.
Press A-a * GHI 4	To delete one incoming/memo message. *1
Press A-a * JKL 5	To delete all incoming/memo messages.

Follow steps **1** to **2** shown above, then:

Press DEF 3	To enter the answering system setting menu.
Press GHI 4	To playback new incoming/memo message(s).
Press JKL 5	To playback all incoming/memo messages.
Press MNO 6	To playback a greeting message.
Press PQRS 7 GHI 4	To record a memo message.
Press PQRS 7 MNO 6	To record your own greeting message.
Press TUV 8	To set the answering system ON.
Press WXYZ 9	To stop playing back or recording a message.
Press 0	To set the answering system OFF.
Press A-a * MNO 6	To delete your own recorded greeting message.

*1 This function is available only during an incoming/memo message playback.

Answering System







◆◆ Remote Operation from a Touch Tone Phone

You can operate the answering system from any touch tone phone.

Firstly you must store your remote code using the handset near the base unit.

The 3-digit remote code prevents unauthorised use of your answering system for listening to recorded messages.

◆ Setting the Remote Code ON

1 Press JOYSTICK (or move). 	2 Select "TAM Operation". 	3 Select "Setting TAM". 
4 Select "Remote Code". 	5 Enter 3-digit Remote Code. 	6 Press JOYSTICK . 

◆ Setting the Remote Code OFF

Follow steps 1 to 4 shown above, then:

5 Press * . 	6 Press JOYSTICK . 
--	---

- The factory preset is Remote Code OFF.

◆ Turnig ON the Answering System Remotely

You can turn on the answering system from any touch tone phone.

1 Call from a touch tone phone then wait for 12 rings.	2 Enter Remote Code within 10 seconds after a long beep.
3 Enter Remote Code after greeting message playback.	4 Voice menu starts after 3 seconds. ➔ Follow the guidance (p. 83).
OR Enter your desired direct remote command (see next page).	


- If your remote code is not stored, you cannot turn on the answering system remotely.

Answering System

◆ Summary of Remote Operation

















You can operate the answering system from any touch tone phone.

- | | | |
|--|---|-----------------------------|
| 1 Call from a touch tone phone. | 2 Greeting message playback. | 3 Enter Remote Code. |
| 4 The number of new message(s) is played. | 5 Voice menu starts after 3 seconds.
◆ Follow the guidance (see next page). | |
| OR | | |
| Enter your desired direct remote command
(see below). | | |

- To skip the greeting message, press  during the greeting on step 2.

◆ Direct Remote Commands

After entering the remote code, you can operate your answering system using direct commands as below, instead of following the voice menu. To end the remote operation, hang up anytime.

Command	Function
	Repeat message (during playback)
	Skip message (during playback)
	New message playback
	All message playback
	Check greeting message
 ◆ Record	Greeting message recording
	Stop operating
	Answering system off
 ◆ 	Deleting specific message (during playback)
 ◆ 	Deleting all messages
 ◆ 	Deleting greeting message (during playback)
 ◆ 	Disconnect

Answering System

◆ Voice Menu

The words in “ ” mean a voice guidance.






	Press 1 . →	
	“Press 1 to playback all messages. Press 2 for other functions.”	“All message playback.” At the end of the last message, “End of final message” is announced. When the remaining recording time becomes less than 5 minutes, the remaining recording time is announced.
	“Press 1 to playback new messages. Press 2 for other functions.”	“New message playback.”
	“Press 1 to record your message. Press 2 for other functions.”	“Please leave your message.” Talk after you hear this message. ↓ Hang up to finish recording.
	“Press 1 to erase all messages. Press 2 for other functions.”	“No message.”
	“Press 1 to record your greeting. Press 2 for other functions.”	“Press 7 to record your greeting. Press 9 to end recording.” Press 7 to start recording. ↓ Talk after a long beep. ↓ Press 9 to finish recording.

Answering System

- After playback, the voice menu will start again from the beginning.
- If you hear “Memory full” after playback, erase some or all of the messages (p. 78).



Answering System

◆◆ Recording a Memo Message


1 Press JOYSTICK (or move). 	2 Select "TAM Operation". 	3 Select "Record". 
4 Select "Record Memo". 	5 Record Memo Message. 20 cm away from the Mic.	6 Press JOYSTICK . 

◆◆ Recording Your Telephone Conversation

When you record your 2-way telephone conversation, you should inform the other party that the conversation is being recorded.

1 Press JOYSTICK twice to start recording, then "Recording" is displayed. 	2 Press JOYSTICK to stop recording. 
--	---

Using the Belt Clip

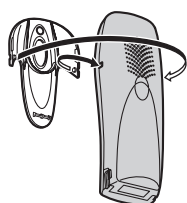


To remove
the belt clip.



You can hang the handset on your belt or pocket using the belt clip.

Optional Headset


Plugging an optional headset into the handset allows hands-free phone conversations. Please use only the Panasonic KX-TCA89EX headset. While using the headset, speakerphone is not available. To switch to speakerphone, disconnect the headset.

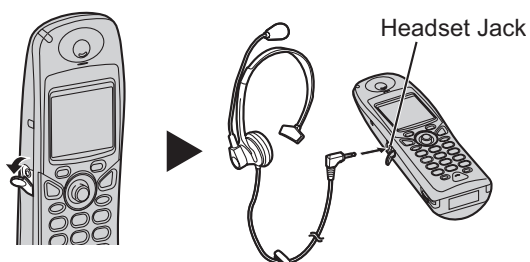

◆ Connecting the Optional Headset to the Handset

Open the headset jack cover, and connect the optional headset to the headset jack as shown.

Wall Mounting

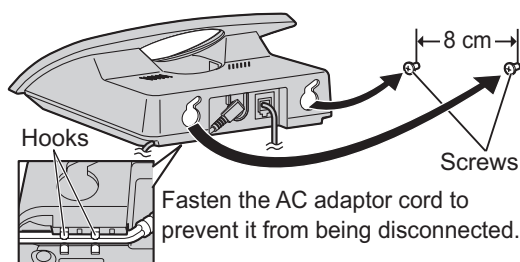


This unit can be mounted on a wall.

- Insert screws into the wall. The centre of the screw holes should be 8 cm horizontally apart.
- Connect the AC adaptor and the telephone line cord.
- Arrange the wires as shown, then mount the unit.

- Make sure the screws are securely fastened to the wall.


Wall Template

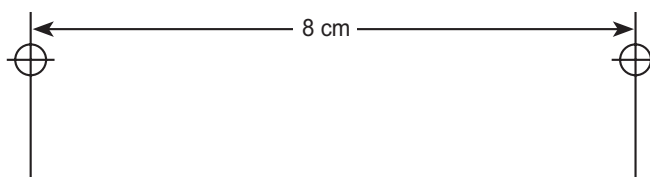


Before Requesting Help

If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your Network provider. If it operates correctly, then the problem is likely to be a fault in your apparatus. In this case, contact your supplier for advice. Your Network provider may charge you if they attend a service call that is not due to an apparatus supplied by them.

Turn the power OFF then ON (Handset)/Disconnect then connect the AC adaptor (Base Unit).

Problem	Possible cause	Solution	Page
The unit does not work.	<ul style="list-style-type: none"> Batteries not installed properly. AC adaptor of base unit not connected properly. 	<ul style="list-style-type: none"> Re-install batteries properly. Disconnect and then connect AC adaptor. 	p. 10
Display is blank.	<ul style="list-style-type: none"> Handset not turned on. 	<ul style="list-style-type: none"> Turn on power. 	p. 12
Display is blank even if the unit is charged.	<ul style="list-style-type: none"> Battery low. 	<ul style="list-style-type: none"> Recharge batteries more than about 15 minutes. 	p. 10
Handset will not turn on.	<ul style="list-style-type: none"> Batteries not inserted. Batteries not charged. 	<ul style="list-style-type: none"> Insert the 2 rechargeable batteries supplied. Place handset on base and connect AC adaptor to base and AC outlet (full charge period 7 hrs). 	p. 10
Battery charge icon not counting up.	<ul style="list-style-type: none"> Dirty charge contacts. Base not powered up. 	<ul style="list-style-type: none"> Clean charge/battery contacts and retry charge. Connect AC adaptor to base unit and AC outlet. 	p. 11 p. 10
📶 icon flashes.	<ul style="list-style-type: none"> Handset not registered to base. Handset out of range of base. No power into base unit. 	<ul style="list-style-type: none"> Register handset to base. Move handset closer to base. Connect AC adaptor to base unit and AC outlet. 	p. 64 p. 10
Handset busy tone heard when  is pressed.	<ul style="list-style-type: none"> Handset out of range of base. Another handset in use. 	<ul style="list-style-type: none"> Move handset closer to base. Wait for the other user to complete call. 	
No dial tone.	<ul style="list-style-type: none"> Telephone line not connected. 	<ul style="list-style-type: none"> Insert telephone line cord to network. Turn power OFF then ON. 	p. 10 p. 12

Before Requesting Help

Problem	Possible cause	Solution	Page
Cannot dial out.	<ul style="list-style-type: none"> • Call Bar mode ON. • Particular dialled number is restricted. • Key lock mode ON. 	<ul style="list-style-type: none"> • Turn feature off. • Remove number from call restricted list. • Turn key lock OFF. 	<p>p. 50</p> <p>p. 58</p> <p>p. 16</p>
Handset will not ring.	<ul style="list-style-type: none"> • Ringer switched off. 	<ul style="list-style-type: none"> • Set ringer to one of 6 volume levels. 	p. 47
Last number redial does not work.	<ul style="list-style-type: none"> • Number exceeded 24 digits. 	<ul style="list-style-type: none"> • Redial manually. 	p. 17
No Caller ID number displayed.	<ul style="list-style-type: none"> • Service not supplied. • Caller has withheld info. 	<ul style="list-style-type: none"> • Caller ID service must be arranged with Network provider. 	p. 19
 icon flashes.	<ul style="list-style-type: none"> • Battery low. 	<ul style="list-style-type: none"> • Recharge batteries. 	p. 10
Cannot register handset to base.	<ul style="list-style-type: none"> • Max. number of bases already registered to handset. • Max. number of handsets already registered to base unit. • Wrong PIN number entered (Default 0000). • Electrical noise in local area. 	<ul style="list-style-type: none"> • Delete unused base registrations from handset. • Delete unused handset registrations from base. • If PIN number is lost, contact the Panasonic Service Centre. • Move base/handset away from sources of electrical noise (e.g. TVs, radios, etc.). 	<p>p. 65</p> <p>p. 65</p> <p>p. 61</p> <p>p. 5</p>
The unit begins ringing (one ring) after other connected telephones.	<ul style="list-style-type: none"> • The SMS feature is turned on. 	<ul style="list-style-type: none"> • Turn the SMS feature off, if you do not use an SMS service. 	p. 41

Before Requesting Help

Answering System

Problem	Possible cause	Solution	Page
The answering system is on, but incoming messages are not recorded.	<ul style="list-style-type: none"> The recording time is set to "Greeting Only". Memory is full (30 minutes or 64 messages). 	<ul style="list-style-type: none"> Select "1 Minute" or "No Limit". Erase some or all of the messages. 	<p>p. 74</p> <p>p. 78</p>
Cannot operate the answering system from a touch tone phone.	<ul style="list-style-type: none"> Incorrect remote code entered. Tones are too short to activate the unit. The answering system is off. 	<ul style="list-style-type: none"> Enter the correct remote code. Press each button firmly. Turn on the answering system. 	<p>p. 82</p> <p>p. 73 p. 81</p>
Cannot operate the answering system with the handset.	<ul style="list-style-type: none"> Someone is operating the answering system. You are too far from the base unit. 	<ul style="list-style-type: none"> Retry when other user has finished operation. Move closer to the base unit. 	
While recording a greeting message, the unit starts to ring and stops recording.	<ul style="list-style-type: none"> A call is being received. 	<ul style="list-style-type: none"> To answer the call, press TALK. The recording stops halfway. Start from the beginning after hanging up. 	
During playback, the unit starts to ring and stops playback.	<ul style="list-style-type: none"> A call is being received. 	<ul style="list-style-type: none"> To answer the call, press TALK. 	

Before Requesting Help

SMS-Text Message

Problem	Possible cause	Solution	Page
Cannot send a message.	<ul style="list-style-type: none"> You have not subscribed to Caller ID. SMS Centre number is not stored in your telephone. Message was interrupted during sending. 	<ul style="list-style-type: none"> Caller ID service must be arranged with Network provider. Store the number. Wait until the message has been sent before using any other telephone functions. 	<p>p. 31</p> <p>p. 40</p>
Cannot send or receive a message.	<ul style="list-style-type: none"> Memory is full. 	<ul style="list-style-type: none"> Delete messages in the Outgoing/Incoming lists. 	<p>p. 35</p> <p>p. 38</p>

Error Code	Description	Page
FD	<ul style="list-style-type: none"> Could not connect to the SMS Centre. Check that you have the correct SMS Centre numbers or turn the SMS feature on. 	<p>p. 40</p> <p>p. 41</p>
FE	<ul style="list-style-type: none"> There was a problem sending the message. 	

Phonebook Character Table

- The following small (or capital) letters of Greek, Russian (Cyrillic), Polish, Czech and Slovakian are not available.
The same letter as capital (or small) will be displayed. α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ φ χ ψ ω
а б в г д е ж з и й к л м н о п р с т у ф х ц ч ш щ ъ я э ю з
- Press **(*)** to change letter size; Capital > Small, Small > Capital.

To enter on LetterWise® Mode, see next page. (As for **1**, see the table on this page.)

Character Table

◆◆ SMS Character Table

“LetterWise®” Character Table

Buttons	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Character Displayed	Space . @ / : ; * # + - 1 " ' , ! j ? ¿ _ € £ \$ ¥ () [] {} & % \ ^ ~ < > = ¢ §	ABC Á Á Á 2	DEF É É É 3 4	GHI Í Í Í 4	JKL 5	MNO Ó Ó Ó 6	PQRS 7	TUV Ú Ú Ú 8	WXYZ 9
		abc á á á 2	def é é é 3	ghi í í í 4	jkl 5	mno ó ó ó 6	pqr 7	tuv ú ú ú 8	wxyz 9

Press **0** for space or 0.

Press **↔** to change letter size; Capital > Small, Small > Capital.

Press **#** to show the next suggested character.

“Alphabet”, “Numeric”, “Greek” and “Extended” Character Table

Buttons	Alphabet (ABC)	Numeric (0–9)	Greek (ΑΒΓ)	Extended (ÄÅÄ)
1	Space . @ / : ; * # + - 1 " ' , ! j ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = ¢ §	1	Space . @ / : ; * # + - 1 " ' , ! j ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = ¢ §	Space . @ / : ; * # + - 1 " ' , ! j ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = ¢ §
ABC 2	ABC 2 abc 2	2	ΑΒΓ 2	Ä Å Ä Å Ä Å Æ Β Γ Ç 2 ä å ä å ä å æ β γ ç 2
DEF 3	DEF 3 def 3	3	Δ Ε Ζ 3	Δ Ε Ε Ε Ε Ε Ε F 3 δ ε ε ε ε ε ε f 3
GHI 4	GHI 4 ghi 4	4	Η Θ Ι 4	Γ Ğ Η Ι Ι Ι Ι Ι Ι 4 g ğ h i i i i i i 4
JKL 5	JKL 5 jkl 5	5	Κ Λ Μ 5	J K L 5 j k l 5
MNO 6	MNO 6 mno 6	6	Ν Ξ Ο 6	M N Ñ Ö Ö Ö Ö Ö Ö ø 6 m n ñ ö ö ö ö ö ø 6
PQRS 7	PQRS 7 pqrs 7	7	Π Ρ Σ 7	P Q R S S S ß 7 p q r s S S ß 7
TUV 8	TUV 8 tuv 8	8	Τ Υ Φ 8	T U Û Ü Ü Ü Ü Ü V 8 t u ù ú û ü ü v 8
WXYZ 9	WXYZ 9 wxyz 9	9	Χ Ψ Ω 9	W X Y Z 9 w x y z 9
0	Space 0	0	Space 0	Space 0

- The following small (or capital) letters are not available. The same letter as capital (or small) will be displayed.

-Ø

-§

- Press **↔** to change letter size (Alphabet, Extended).

Useful Information

Index

AC Adaptor	4, 10	Handset	
Accessories	4	Display	9
Answering a Call	14	Initial Settings	55
Answering System	73	Locator/Paging	16
Any Key Talk	14	PIN	52
Auto Talk	14, 53	Registration	64
Automatic Route Selection	59	Reset	54
Base Unit		Ringer Pattern	47
Initial Settings	62	Ringer Volume	47
PIN	61	Hands-Free Phone	15
Reset	61	Headset, optional	85
Ringer Volume	56	Intercom	66
Selection	66	Key	
Battery		Lock	16
Caution	5	Tone	48
Charge	10	Making a Call	14
Information	11	Memo Alarm	44
Installation	10	Mute	15
Belt Clip	85	Pause Time	57
Call Bar	50	Phonebook	
Call Restriction	58	Copy	68
Call Waiting	18	Dialling	28
Caller ID List		Hot Keys	30
Deleting	21	Storing	24
Dialling	19	Power On/Off	12
Editing	20	Private Category	23
Storing	20	Recall	17
Cancelling a Base Unit	65	Recall Time	57
Cancelling a Handset	65	Receiver Volume	15
Conference Call	67	Redial List	17, 21
Date and Time	13	Redialling	17
Dialling Pause	18	Setting up	10
Direct Call Number	50	SMS Feature	31
Display		SOFT Keys	6, 7
Language	12	Specifications	93
Standby Mode	48	Transferring a Call	67
Talk Mode	49	Walkie-Talkie	70
Emergency Calls	58	Wall Mounting	85
Guarantee	94		

Technical Information

Specifications


Standard:	DECT=(Digital Enhanced Cordless Telecommunications) GAP=(Generic Access Profile)
Number of channels:	120 Duplex Channels
Frequency range:	1.88 GHz to 1.9 GHz
Duplex procedure:	TDMA (Time Division Multiple Access)
Channel spacing:	1728 kHz
Bit rate:	1152 kbit/s
Modulation:	GFSK
RF Transmission power:	Approx. 250 mW
Voice coding:	ADPCM 32 kbit/s
Power source:	AC Adaptor 220 - 240 V, 50 Hz
Power consumption, base unit:	Standby: Approx. 3.5 W Maximum: Approx. 9.2 W
Operating conditions:	5 - 40 °C, 20 - 80 % relative air humidity (dry)
Dimensions and mass (weight):	
Base Unit:	About (58 mm x 128 mm x 105 mm) x 200 g
Handset:	About (143 mm x 48 mm x 32 mm) x 125 g

- Specifications are subject to change.
- The illustrations used in this manual may differ slightly from the original device.

Connections:

The unit will not work during a power failure. We recommend you connect a standard telephone on the same line for power protection.

“Eatoni and LetterWise are trademarks of Eatoni Ergonomics, Inc.”

 GARANTIEBEWIJS Zorgvuldig door koper te bewaren tezamen met gedateerde koopbon	Dealerstempel	
	Type no.	
	Serie no.	
	Datum aankoop	

Onze producten zijn met uiterste zorg geproduceerd en van zeer hoge kwaliteit. Wij garanderen de ongestoorde werking van het apparaat gedurende één jaar na aankoopdatum, mits het apparaat werd gebruikt zoals in de handleiding is aangegeven.

Op verbruiksmaterialen, op accu's of batterijen en op beschermingsmiddelen wordt géén garantie verleend.

De garantie vervalt indien er door anderen wijzigingen zijn aangebracht in of aan het apparaat of indien het defect is ontstaan door ondeugdelijke verbruiksmaterialen of accessoires of ten gevolge van invoeden van buiten af.


 

 
 

 
Garantie wordt uitsluitend verleend aan de hand van dit originele garantiebewijs en de gedateerde aankoopbon.

Afwijkende bepalingen

1. Voor V.P.S. projectiebuizen, (thermische) printerkoppen, fotokopieerapparatuur en elektronische whiteboards geldt een garantieperiode van 6 maanden op material en arbeidsloon.
2. Voor reparatie aan telefoonapparatuur, telefooncentrales, professionele magnetronovens, fotokopieerapparatuur, elektronische whiteboards, facsimileapparatuur en laserbeamprinters dient u altijd eerst uw dealer te raadplegen.
3. Voor mobiele service aan videoprojectie systemen, professionele magnetronovens, elektronische whiteboards, en fotokopieerapparatuur, worden na 3 maanden na aankoopdatum van het apparaat voorrijkosten berekend.
4. Voor magnetronbuizen geldt een garantieperiode van 2 jaar op het materiaal en van 12 maanden op het arbeidsloon.
5. Het reinigen van videokoppen valt niet onder garantie. Raadpleeg altijd uw gebruiksaanwijzingen of uw dealer.
6. De volgende onderdelen vallen buiten garantie: snoeren, fluorescentiebuizen, stofkappen, glasplaten, keramiekplaten en antennes.
7. a) Voor videokoppen geldt een garantieperiode van 3 maanden of (indien eerder) 500 uur.
b) Voor videokoppen van het DVCPRO systeem geldt een garantieperiode van 12 maanden of (indien eerder) 1000 uur.
8. Voor de bronlamp van de LCD videoprojectoren geldt een garantieperiode van 30 dagen resp. tot 500 uur.
9. De software updates van de professionele non-lineaire videomontage systemen vallen buiten deze garantiebepalingen.

Voor reparatie van apparatuur in Nederland, dient de apparatuur franco verzonden te worden aan:

PANASONIC-CENTRE NEDERLAND (Servicom b.v.),
Zonweg 60, 2516 BM DEN HAAG
tel.: 070 - 3314500, fax.: 070 - 3477185

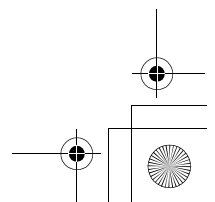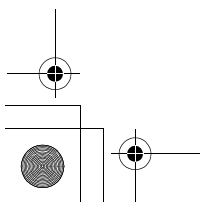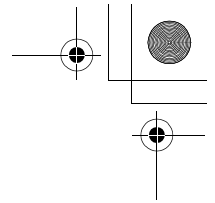

Hereby, Panasonic Communications Co., Ltd., declares that this Dect Cordless Telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the manufacturer's declaration of conformity to the essential requirements of the R&TTE Directive is available at the following web address:
<http://doc.panasonic-tc.de>

For your future reference

Serial No. _____ Date of purchase _____

(found on the bottom of the base unit)

Name and address of dealer _____

Attach or keep original receipt to assist with any repair under warranty.

Customer Care Helpline Tel. No.: 070-3314500

CE0436

1999/5/EC

Technical specifications are subject to change.

Panasonic Service Centre:

PANASONIC-CENTRE NEDERLAND (Servicom b.v.)

Zonweg 60

2516 BM Den Haag

Tel: 070 - 3314 500

Fax: 070 - 3314 381

E-mail: info@pcn.panasonic.nl

Verkoopafdeling:

HAAGTECHNO BV

POSTBUS 236

5201 AE DEN BOSCH

Tel: 073-6402579

Fax: 073-6415200

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

PQQX13794ZA F0603-0